

**ONE LIFE.  
PROTECT IT.**



**AIR XKD**

**USER MANUAL**

**GENERAL PURPOSE**

## CONTENTS

<b>1.</b>	<b>General description</b>	<b>4</b>	10.2	Main function keys	28
1.1	Product features	5	<b>11.</b>	<b>General operation</b>	<b>30</b>
1.2	Performance data	5	11.1	User interface display	30
1.3	Intended use	5	11.2	Particulate display information	30
1.4	Limits of use	6	11.3	Top cap closed	31
<b>2.</b>	<b>Product safety</b>	<b>7</b>	11.4	Settings structure	32
<b>3.</b>	<b>Danger from process</b>	<b>8</b>	11.5	Passcode protection	33
<b>4.</b>	<b>Safety procedures</b>	<b>9</b>	11.6	Change passcode	33
4.1	Laser safety precautions	9	11.7	'Enable'/'Disable' passcode protection	34
<b>5.</b>	<b>System components</b>	<b>11</b>	11.8	PM settings	34
5.1	TX8005 <b>AIR XD Dust Monitor</b>	12	11.9	Setting custom PM values	35
5.2	Particulate flow path	13	11.10	PM density	35
5.3	Peripherals and accessories	14	11.11	Averaging settings	36
<b>6.</b>	<b>Certification</b>	<b>16</b>	11.12	Alarm settings	38
6.1	Compliance	16	11.13	Channel select	37
<b>7.</b>	<b>Technical information</b>	<b>17</b>	11.14	Threshold channel	38
7.1	Sensing parameters	17	11.15	Set alarm threshold	38
7.2	Technical specification	18	11.16	Alarm latching	38
7.3	Product dimensions	19	11.17	'Enable'/'Disable' alarm	39
<b>8.</b>	<b>Hardware installation</b>	<b>20</b>	11.18	4 mA to 20 mA outputs	39
8.1	Safety precautions	20	11.19	Select PM channel	40
8.2	Mounting details	21	11.20	Map 4 mA to 20 mA to data channel	40
8.3	Main parts	22	11.21	Set maximum PM value	40
8.4	Electrical connections	23	11.22	Select PM channel	41
8.5	I/O terminals	25	11.23	Status	41
8.6	Power connections	25	11.24	Communications	41
8.7	RS485: Output signals	26	11.25	Ethernet communications	41
8.8	RS485: Line terminals	26	11.26	Network status	42
<b>9.</b>	<b>Commissioning</b>	<b>27</b>	11.27	IP settings	42
9.1	First power on	27	11.28	Ethernet operation mode	42
9.2	<b>Breathe</b> software	27	11.29	Ethernet connection status	43
<b>10.</b>	<b>Controls and indicators</b>	<b>28</b>	11.30	RS485 MODBUS communications	43
10.1	Navigation	28	11.31	Set baud rate	43
			11.32	Set device address	44
			11.33	Set communications parity	44
			11.34	Display	44
			11.35	Adjusting display contrast	44

## CONTENTS

11.36	Set display backlight	45	14.5	Preventative maintenance	65
11.37	Set display colour	45	14.6	Sensor cleaning	65
11.38	Set display sleep	45	14.7	Compliance audit check	66
11.39	Date and time	46	14.8	Compliance audit check: The results	68
11.40	Set date	46			
11.41	Set time	46			
11.42	System	46	<b>15. Troubleshooting</b>		<b>69</b>
11.43	System information	47	15.1	High temperature operating	69
11.44	Restart controller	47	15.2	Low temperature start up	69
11.45	Data download	47	15.3	Fault codes	69
11.46	Memory module	48			
11.47	Firmware update	49	<b>16. Glossary and definitions</b>		<b>71</b>
11.48	Relay override	49	<b>17. Disposal</b>		<b>72</b>
11.49	Watchdog	50			
<b>12. Instrumentation configuration</b>		<b>51</b>	<b>Disclaimer</b>		<b>73</b>
12.1	Default settings	51	<b>Trademark</b>		<b>73</b>
12.2	On-site configuration	51			
12.3	MODBUS addresses	52			
12.4	Reading floating point registers	55			
12.5	Coil registers	56			
12.6	Holding register	57			
12.7	Instrument self-test	59			
<b>13. Updating firmware</b>		<b>61</b>			
13.1	Units with controller v1.2.3 or earlier and/or memory module v1.4 or earlier	61			
13.2	Preparation	61			
13.3	Steps to update the controller	62			
13.4	Steps to update the memory module	63			
<b>14. Maintenance</b>		<b>64</b>			
14.1	Visual checks	64			
14.2	Cleaning checks	64			
14.3	Air entry/exit apertures	64			
14.4	Filter replacement	64			
14.5	Compliance audit check	36			
14.6	Warranty	38			

## 1. GENERAL DESCRIPTION

The Trolex **AIR XD Dust Monitor** is designed to provide detailed, accurate, real-time data on airborne particulates so that users can take appropriate actions to stay safe and ensure personnel are fully protected from particulate-related health hazards. The **AIR XD** allows users to simultaneously monitor multiple particulate matter (PM) sizes (PM1.0, PM2.5, PM4.25, PM10, as well as custom sizes) and can report on Total Suspended Particulates (TSP). Precise data is collected for measurable particulates, enabling detailed size profiling and analysis using the application software.

The **AIR XD** uses an innovative optical particle counter (OPC) that combines adaptive particle flowrate with advanced sensing technology to ensure a high level of measurement accuracy. The size of each particle is instantaneously measured and classified at up to 10,000 samples per second to allow detailed real-time reporting in high dust environments.

As the **AIR XD** records data on all particulates between 0.35  $\mu\text{m}$  and 40  $\mu\text{m}$ , users can easily access and view detailed information about a wide range of PM sizes. Measurement information can be viewed via the instrument display or as live or historical readings using the application software.



TX8005 **AIR XD Dust Monitor**

## 1.1 Product features

- Real-time, continuous measurement of atmospheric dust concentration
- High-reliability, low-maintenance for high dust environments
- High capacity OPC
- Industry standard sizing PM1.0, PM2.5, PM4.25 and PM10
- Low-end resolution measuring down to 0.35 µm with 99.9% capture
- Ability to display TSP measurement reading
- Quantification of particle size categories to customer requirements (custom sizing)
- Operational stability in varying environment and atmospheric conditions
- On-device display readout
- Choice of display modes: 'Live' readout or configurable 'Averages'
- 2 x configurable relay output contacts for remote alarms and control functions
- 2 x 4 mA to 20 mA analogue output signals of measured averages
- Remote RS485 MODBUS RTU Serial I/O interface
- Ethernet MODBUS TCP/IP output
- High visibility warning indicators
- 'Plug and play' installation

## 1.2 Performance data

Using current advancements in light-scattering techniques combined with patented data processing algorithms, the **AIR XD** is able to achieve levels of accuracy ( $\pm 5\%$ ) normally only found in high-end laboratory instruments.

## 1.3 Intended use

The **AIR XD** is a particulate monitor designed for use in range of applications and environments. The instrument is suitable for monitoring in either indoor or outdoor ambient air conditions and can cope with both high and low particulate concentration levels (up to 1500 mg/m<sup>3</sup>). The instrument is designed to be low maintenance and does not use pumps or filters. The sensing element has an adaptive flowrate to increase accuracy in environments with varying airflow.

## **1.4 Limits of use**

To ensure the optimum performance and safe operation, the **AIR XD** must be operated as per the limits detailed in the technical data section of this user manual. Operation outside these limits may result in damage to the equipment or failure to achieve the performance specification.

Continual operation of the **AIR XD** at extremes of the specified temperature limits may reduce the operating lifetime of the product.

**Troxex will not be liable for any injury or damage caused by incorrect installation, setup, operation or maintenance resulting in a failure to follow the procedures and safety instructions provided in this user manual.**

## 2. PRODUCT SAFETY

The following symbols are used in this manual or on the instrument to indicate procedures that if not followed correctly, may result in personal injury or damage to equipment.



**WARNING:** Alerts the user to a potentially hazardous procedure or practice which if not followed correctly can result in serious personal injury or injury of others.



**CAUTION:** Alerts the user to a procedure or practice which, if not followed correctly can result in damage to the system or ancillary equipment.

In addition, the following symbols are used on the instrument.



**WARNING: ELECTRIC SHOCK RISK**



**WARNING: LASER RADIATION**

The use of controls, adjustments, or procedures other than those specified in this user manual may result in exposure to hazardous optical radiation.

### **3. DANGER FROM PROCESS**

It is possible that the **AIR XD** could be installed in environments that contain process particulates which can be hazardous to health.

Unless process conditions are known to be entirely safe, suitable precautions such as the use of breathing apparatus or environmental purging/detoxification should be employed before entry is made into the installation or maintenance environment.

**Note:** This product variant is not designed for use with flammable or explosive dust in combustible concentrations. In the event of potential combustible concentrations becoming present in a non-hazardous location, this variant of the **AIR XD** must be powered down.

It is the responsibility of the installer to risk assess the suitability of the instrument for installation and use in the intended application.



## 4. SAFETY PROCEDURES

Always observe the safety precautions detailed in this user manual. Personnel installing and maintaining the equipment are responsible for their personal safety and correct handling of the equipment in accordance with all safety instructions detailed.

Follow all warnings and instructions marked on the instrument. Warning on the instrument indicate a hazard at or near the location of the warning label.

Installation in working environments can be challenging and correct setup is critical to the function of the instrument. It is important that you carefully read the entire user manual before using and installing the **AIR XD** for the first time.

Peripheral components such as the power supply and communications module/peripheral or interface must be installed according to the manufacturer's instructions and the installation location's prevailing statutory regulations.

The installation of the instrument must only be carried out by competent personnel. Each installation needs to be considered with reference to the local safety regulations and authorities.

Refer to the '**Certification and Conformity**' section of this user manual and to the relevant certificates for any installation parameters and special conditions of safe use.

Observe the national safety regulations issued, for example, by the employers' liability insurance association, social security institutions, occupational safety and health authorities or other safety organisations.

### 4.1 Laser safety precautions

The **AIR XD** is rated via the *Class 1* 'Laser Safety Guideline' under all conditions of normal use.


*Class 1* laser products may contain laser systems of a higher class but there are adequate engineering control measures to ensure that access to the beam is not permitted during normal use.



**WARNING:** *Class 3B* laser radiation: **do not** open the laser housing when the laser is powered on as it may result in eye damage from directly viewing the laser beam.

The **AIR XD** complies with:

IEC 60825-1 2014  
21 CFR-1040.10 and 1040.11

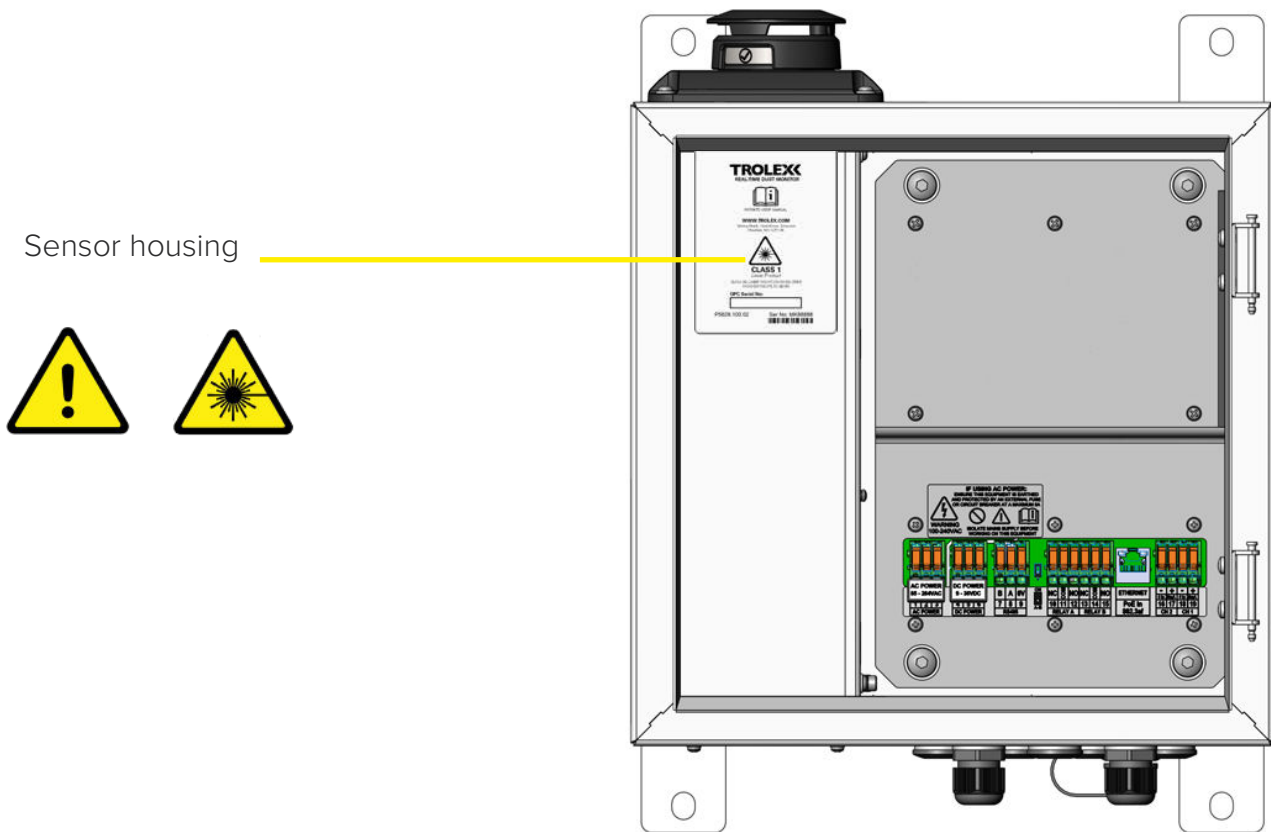

**WARNING:** There are no user-serviceable parts inside the **AIR XD** sensor housing. Servicing should only be carried out by Trolex or an approved service technician.

## 5. SYSTEM COMPONENTS

The **AIR XD** is typically installed as a stand-alone instrument for general purpose applications. The instrument is supplied with peripherals fitted to allow for the plug and play installation to universal mains power supplies and data outputs.

The **AIR XD** instrument and supporting Trolex **Breathe** software is specifically designed to work in conjunction with each other using proprietary protocols and design features. The system also supports third-party power supplies and communication protocols where required.




**Note:** M20 gland entries are provided for custom installation requirements. Gland entries may be blanked, and installations may vary from diagram shown.

## 5.1 TX8005 AIR XD Dust Monitor

The **AIR XD Dust Monitor** uses an OPC that is located inside a robust stainless steel housing. This provides isolation and ingress protection between the particle flow path and the main control circuits. Control circuits are housed in a lockable, IP66-rated coated steel enclosure. Information and settings can be accessed using the keypad and display located on the front of the instrument.

The **AIR XD** can be configured to report on PM size concentrations or TSP based on user requirement, with the option of 2 x configurable setpoint relay outputs. Detailed information can be transmitted via an RS485 or ethernet connection to a computer running the Trolex **Breathe** software or downloaded directly from the internal memory module using a USB storage device.

The figure below shows the location of the navigation buttons, display screen and status LEDs. Power and network connections enter the main housing via cable entry glands located on the bottom of the instrument. The **AIR XD** can be wall or stand mounted via mounting brackets.

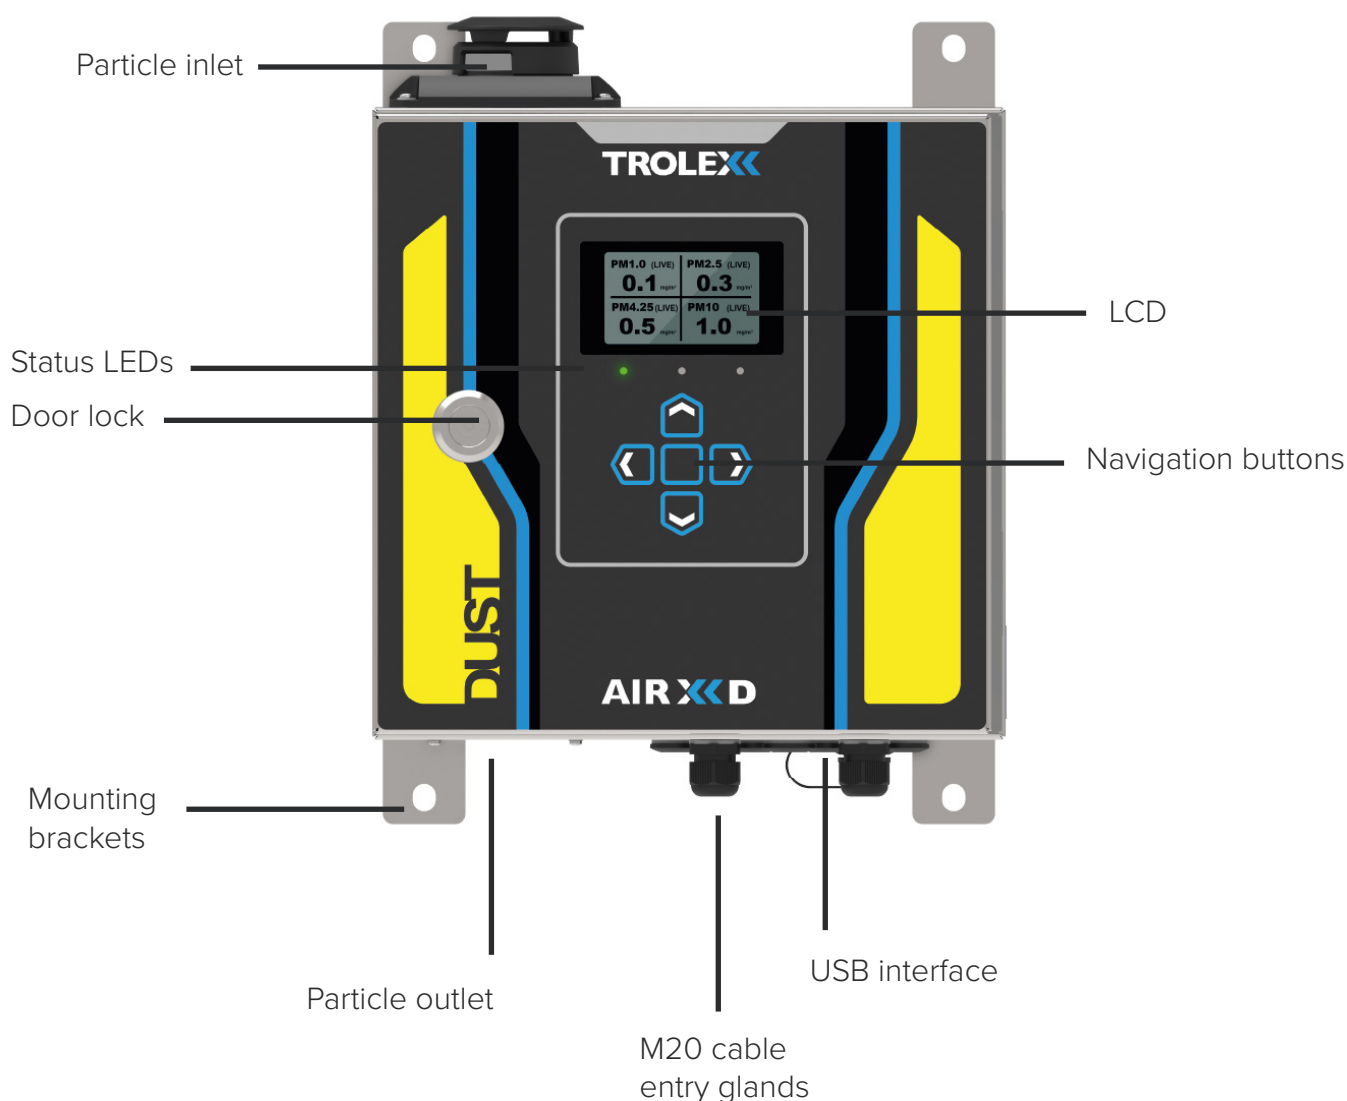


## 5.2 Particle flow path

The **AIR XD** has been designed with the ability to restrict ingress through the particulate flow path during routine maintenance and cleaning periods. A rotational top cap is used to 'open' or 'close' the particle flow path to provide increased ingress protection during cleaning.

It is recommended that the top cap is set to the 'closed' position during instrument maintenance and cleaning to ensure the dust sensor is not exposed to unnecessary ingress. When the top cap is rotated into the 'closed' position, the **AIR XD** conforms to IPX6.

The **AIR XD** can detect whether the flow path is 'open' or 'closed' and will record top cap positions to aid with instrument maintenance schedules.

**Note:** Rotate the top cap to move between 'open' and 'closed' positions.

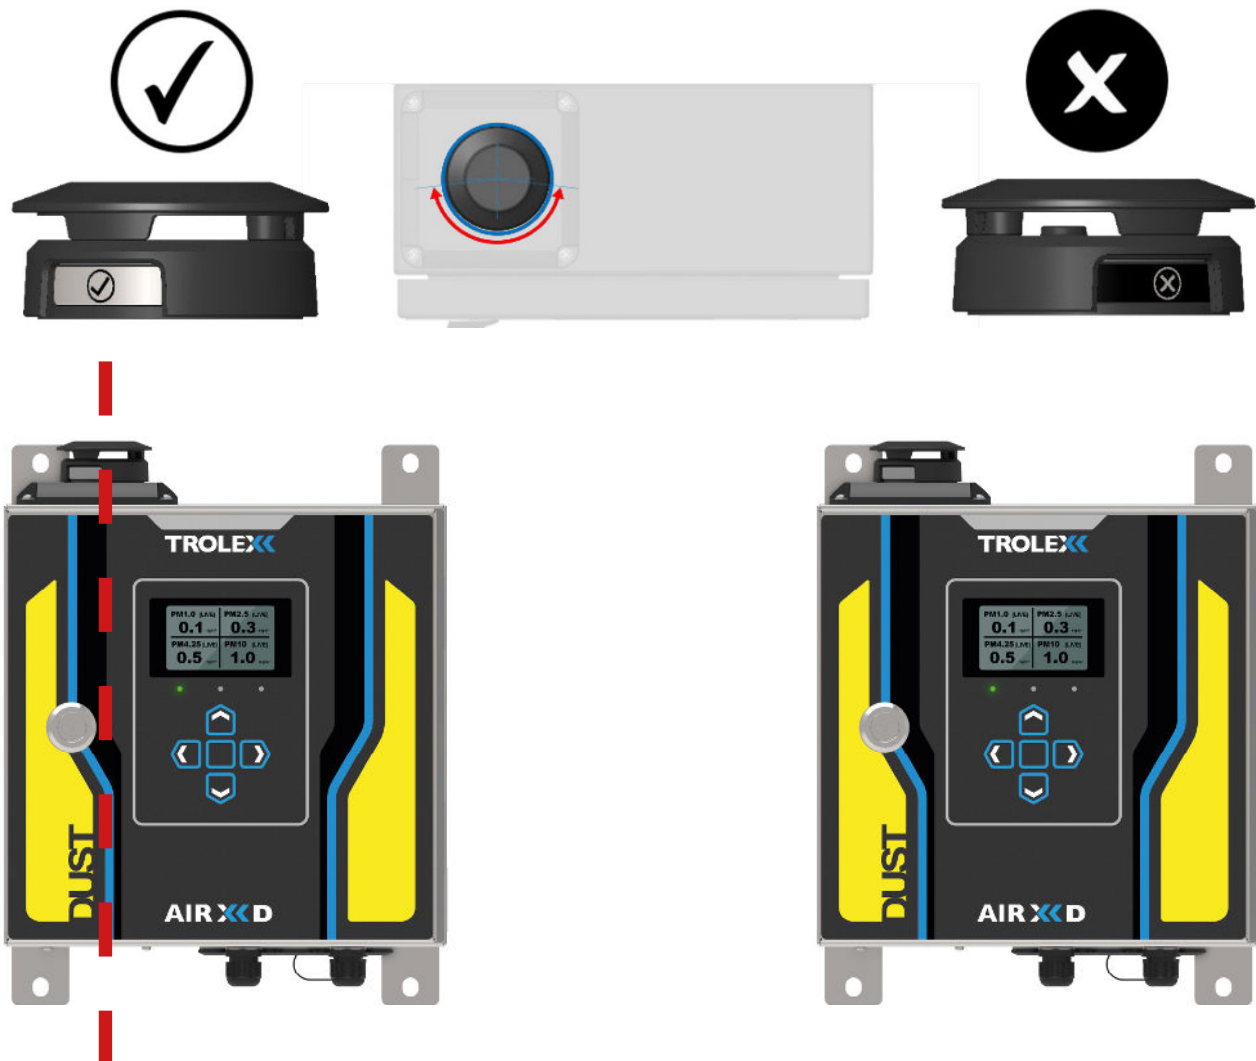


Open flow path

Closed flow path

## 5.3 Peripherals and accessories

### Power supply

The **AIR XD** is configured to allow connection to a standard 100 V to 240 V ac supply or a 9 V to 36 V dc supply. Before connecting a power supply to the instrument, ensure that the supply source is compatible with the instrument and information outlined on the appropriate rating plate. See below for rating plate details.

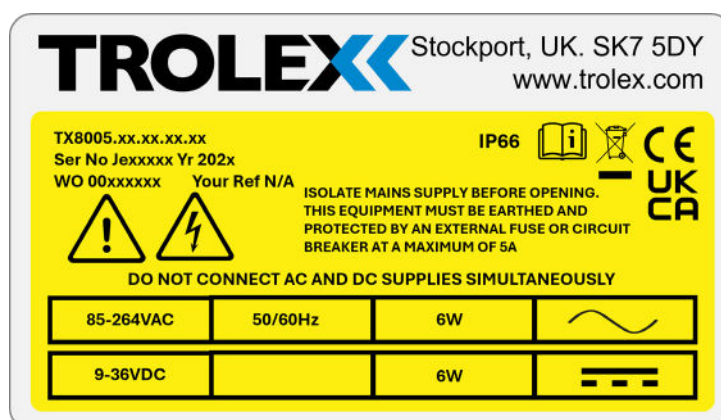

### Windows PC or server

A Windows PC or server is required to run the Trolex **Breathe** software (required to collect and process data from the **AIR XD** instrument).

It is recommended that client computers meet or exceed the following system requirements, before installing the Trolex **Breathe** software. This applies to both dedicated hardware and virtual machines. Other configurations may work but cannot be guaranteed.

CPU	Intel® Core™ i5-6300U CPU @ 2.4 GHz
RAM	8 GB (minimum)
Disc space*	20 GB (recommended)
Communications	DB9 serial port, USB serial port, and ethernet port
Operating system	Windows 10

\*Dependent on the data capture.


## Troxlex Breathe software

Data transmitted to a PC or server is collected, stored, and processed using the supporting Trolex **Breathe** software. The instrument communicates with the **Breathe** software using MODBUS RTU (RS485) and Ethernet TCP/IP.

Information collected by the **AIR XD** device can also be locally downloaded via USB, and imported into the software for data analysis and interrogation.

**Breathe** application software can be used to monitor in real time or review historical data. It allows the user to monitor instrument information, graph live data sets and monitor alarms.

**Note:** Operating instructions for the application software are provided in a separate user manual.

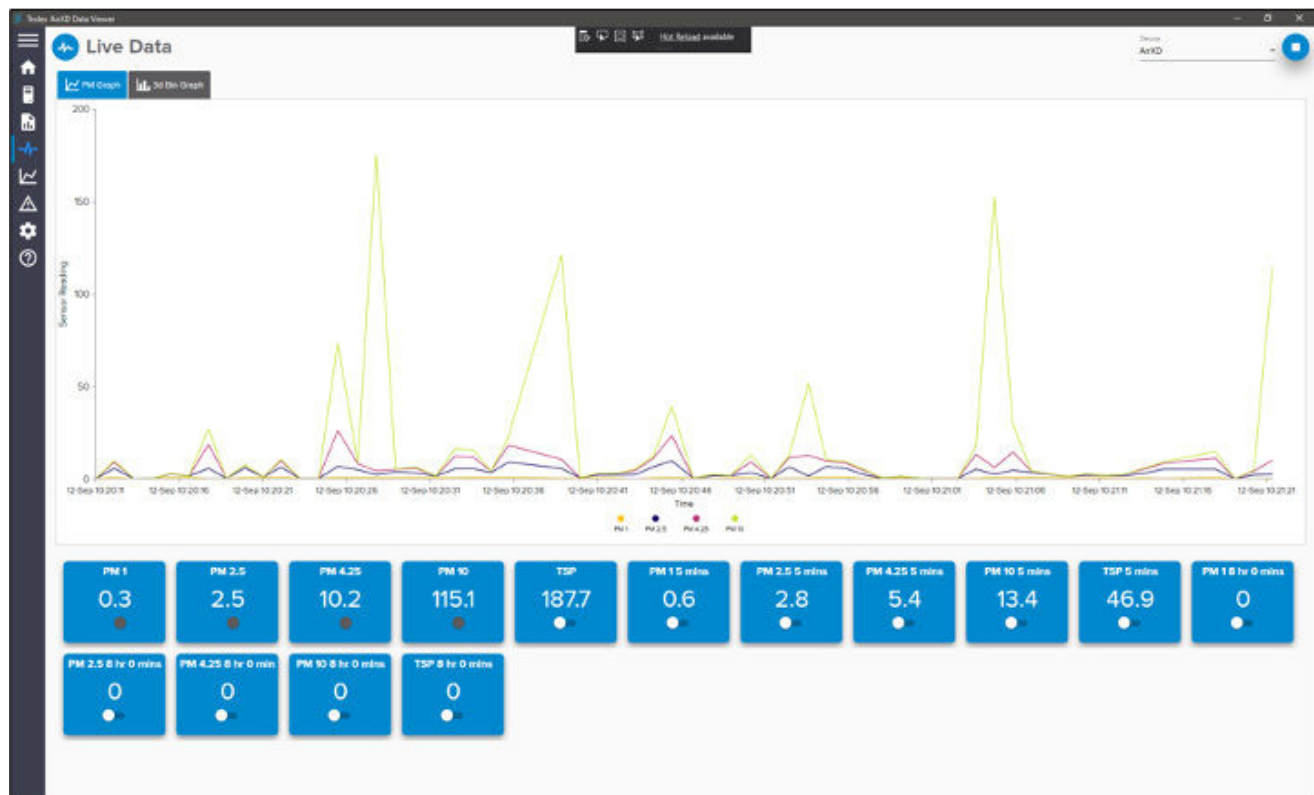

## 6. CERTIFICATION AND CONFORMITY

### 6.1 Compliance



The **AIR XD** complies with the following European Union directives:

Electromagnetic Compatibility (EMC) Directive 2014/30/EU

**Low Voltage Directive (LVD) 2014/35/EU**

EN 61326-1:2013

EN 61000-6:2:2019

EN 61000-6-3:2007+A1:2011

**Low Voltage Directive (LVD) 2014/35/EU**

EN 61010-1:2010



**RoHS 2 Directive 2011/65/EU**



## 7. TECHNICAL INFORMATION

### 7.1 Sensing parameters

<b>PM size range</b>	PM1.0, PM2.5, PM4.25, PM10 + TSP
<b>TSP range</b>	Up to +40 $\mu\text{m}$ displayed in $\text{mg}/\text{m}^3$ or $\mu\text{g}/\text{m}^3$
<b>Extended range</b>	TSP indicative up to 150 $\mu\text{g}$ displayed in $\text{mg}/\text{m}^3$ or $\mu\text{g}/\text{m}^3$ 150 $\text{mg}/\text{m}^3$
<b>PM measurement range</b>	0.35 $\mu\text{m}$ to +40 $\mu\text{m}$ over 24 bins
<b>PM measurement capability*</b>	Up to 1500 $\text{mg}/\text{m}^3$
<b>PM continuous operating range**</b>	Up to 25 $\text{mg}/\text{m}^3$
<b>PM density</b>	0.8 g/ml to +8.0 g/ml (default: 1.65 g/ml)
<b>PM measurement units</b>	$\text{mg}/\text{m}^3$ or $\mu\text{g}/\text{m}^3$
<b>Averaging period</b>	1 second to 24 hours
<b>Averaging channels</b>	~1.5 l/m (nominal)
<b>Sampling interval</b>	$\pm 25\%$
<b>Particle count</b>	Up to 10,000 (particles/second)
<b>Flow rate</b>	Dynamic (1.2 l/min nominal)
<b>Total flow rate</b>	5.5 l/min (typical)
<b>Accuracy</b>	$\pm 5\%$

\*The instrument can define particulate measurement peak trends up to the quantity specified.

\*\*During sustained high dust loading periods, the instrument will report on PM data up to the quantity specified.

**Note:** Sustained exposure to PM quantities above 25  $\text{mg}/\text{m}^3$  will be logged; however, this may affect the operating life of the OPC.


## 7.2 Technical specification

<b>Ambient temperature limits</b>	-10 °C to +45 °C
<b>Humidity</b>	0 to 95% RH (non-condensing)
<b>Protection classification</b>	Main enclosure, dust and waterproof: IP66 Particulate flow path (cap open): IP22 Particulate flow path (cap closed): IPX6
<b>Housing material</b>	Polymer coated stainless steel
<b>Weight</b>	8.2 kg
<b>Cable entries</b>	5 x M20 with removable blanks 1 x M20 USB connector
<b>Power</b>	+100 V to +240 V ac 50/60 Hz +9 V to +36 V dc
<b>Supply current</b>	100 mA nominal ac 660 mA nominal dc
<b>Power consumption</b>	6 W
<b>Inrush current</b>	350 mA peak
<b>Relay outputs</b>	2 x configurable (alarm outputs) Dry contact Maximum rating 36 V ac/dc 300 mA (internal overcurrent and overvoltage protection fitted)
<b>4 mA to 20 mA outputs</b>	2 x configurable (real time or average readings) R1 and R2 with adjustable setpoints Maximum attached load: 280 Ω
<b>Communications</b>	RS485 data output with MODBUS RTU protocol Ethernet (MODBUS TCP/IP)
<b>Data download</b>	External USB interface
<b>Instrument data storage</b>	8 GB > 10 years (log rate dependent) Stored device data can be cleared as required
<b>User interface</b>	128 x 64 dot matrix display with RGB backlight
<b>Visual alarms</b>	Display RGB backlight

## Indicators

1 x green high brightness LED – sensor heartbeat  
1 x blue high brightness LED – communications

### 7.3 Product dimensions

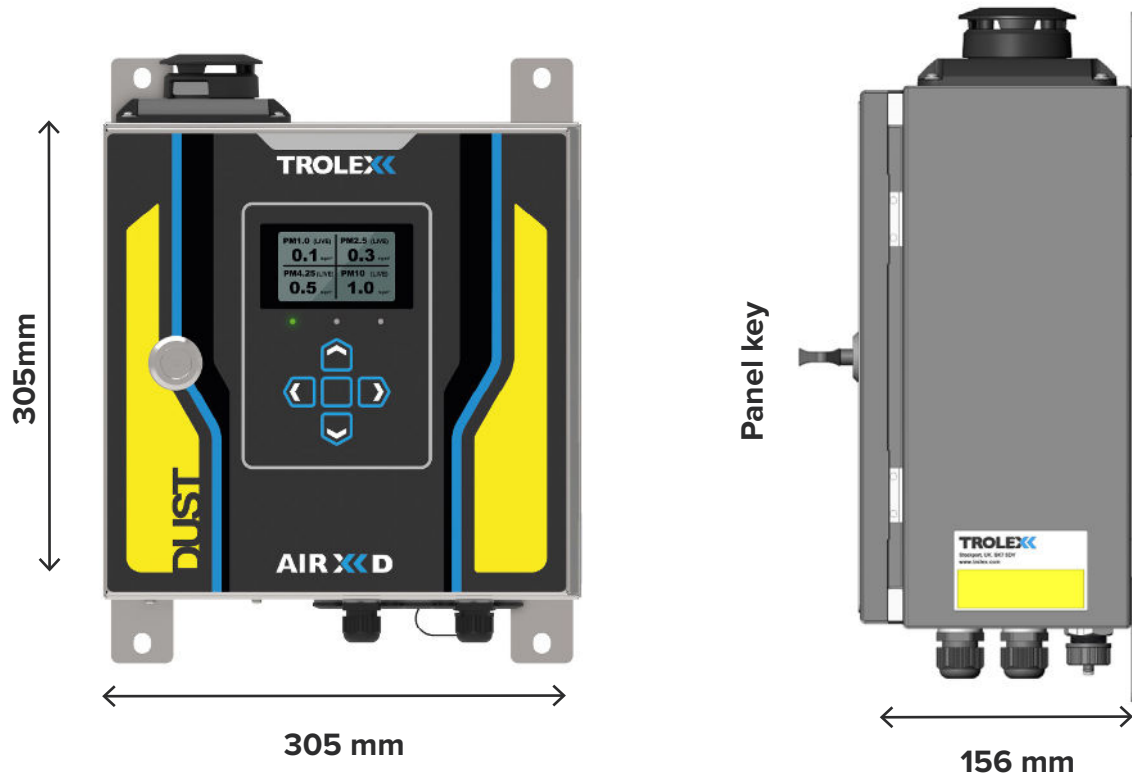

**Note:** Recommended 100 mm inlet clearance.

## 8. HARDWARE INSTALLATION

### 8.1 Safety precautions

Refer to **section 4** of this user manual before undertaking the installation of the **AIR XD** instrument. The installation location of the **AIR XD** instrument is the responsibility of the installer and care should be taken to ensure an appropriate position has been selected. Consider the location of a suitable power supply and external fuses, access to a communications network and the protection of cabling from damage.


1. Secure the **AIR XD** to a suitable mounting surface using the integrated mounting brackets.
2. Ensure that the **AIR XD** is mounted in an upright position.
3. Unlock and open the enclosure door.
4. Ensure that power is isolated before making electrical connections to the instrument.
5. Power supply voltage and frequency must match the instrument (refer to rating plate).
6. Ensure external switches or fuses are installed where applicable.
7. Run the required cables through the cable glands provided at the base of the enclosure.
8. Wire the cables into the relevant terminals as indicated on the internal plate (refer to **section 8.4**).
9. Tighten the cable gland against the cable to ensure an IP seal.
10. Close and lock the door after use to maintain the IP rating of the enclosure.
11. Ensure that the air entry and exit ports are not restricted or covered.

**Note:** The instrument is susceptible to ingress when the door is open so care must be taken to ensure the location is clean during installation.

## 8.2 Mounting details

The figure and tables below detail the connections available internally in the **AIR XD**.

The connections can be accessed by opening the front housing of the instrument using the supplied key.

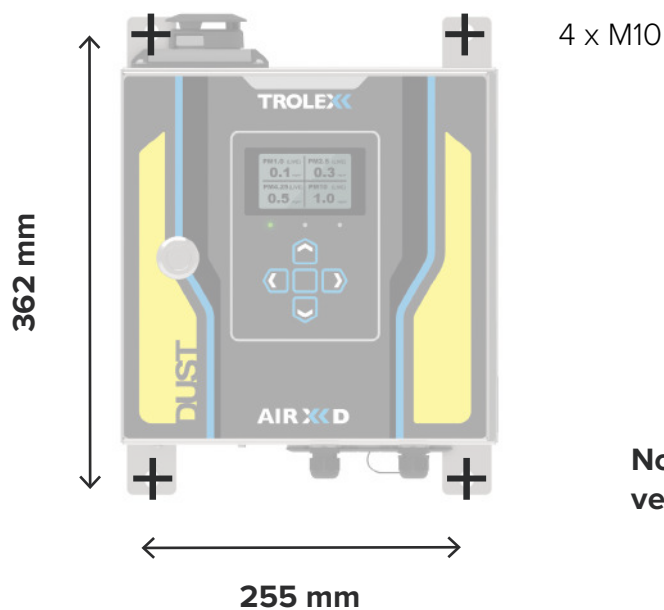


**Note:** Ensure the **AIR XD** is mounted **vertically** during installation.

## 8.3 Main parts

The figure and tables below detail the connections available internally in the **AIR XD**.

The connections can be accessed by opening the front housing of the instrument using the supplied key.

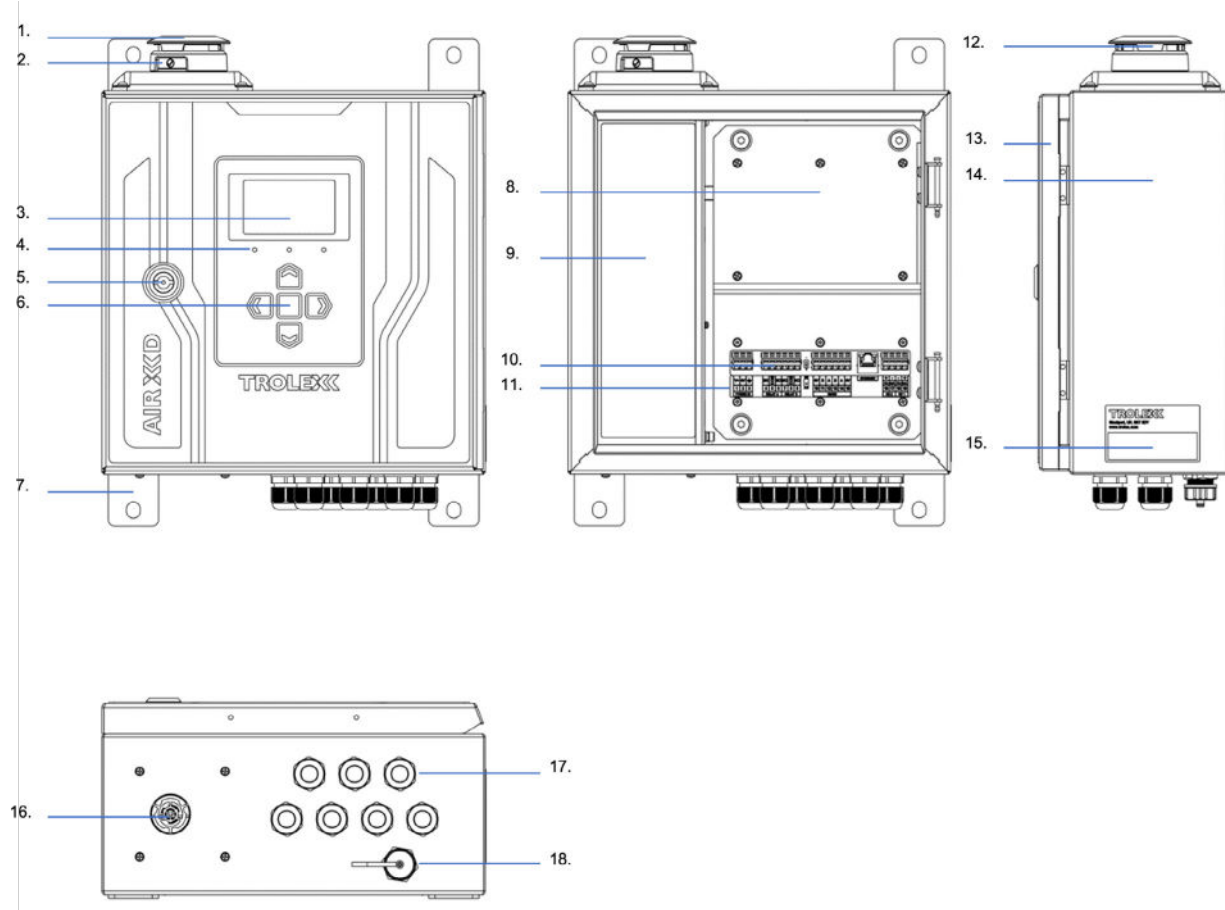

- |                                |                               |                       |
|--------------------------------|-------------------------------|-----------------------|
| 1. Ingress cap                 | 8. PCB mounting plate         | 14. Main enclosure    |
| 2. Inlet flow 'on'/'off' label | 9. Particulate sensor housing | 15. Rating plate      |
| 3. Display                     | 10. Input/output terminals    | 16. Air outlet grille |
| 4. Status LEDs                 | 11. Input/output labels       | 17. M20 cable glands  |
| 5. Door lock                   | 12. Air inlet aperture        | 18. USB interface     |
| 6. Navigation keypad           | 13. Enclosure door            |                       |
| 7. Mounting brackets           |                               |                       |

## 8.4 Electrical connections


The connections can be accessed by opening the front housing of the instrument using the supplied key.


The connections are clearly labelled on the internal metal plate. Wires are inserted into the connector terminals by first using a small flat-head screwdriver or dedicated tool inserted into the small recess above the appropriate terminal. Pushing the screwdriver down into the mechanism opens the connector terminal allowing the wire to be inserted into the opening.

Before placing the wire into the connector, the wire must be stripped and crimped to ensure a good electrical connection. Once the wire has been sufficiently pushed into the terminal, remove the screwdriver to allow the mechanism to clamp the crimped end.


Give a gentle tug on the wire to make sure it has been clamped sufficiently by the connector.

Ensure mains cables are fixed in place using the mounting points provided. Details of the connections are given in the table below.

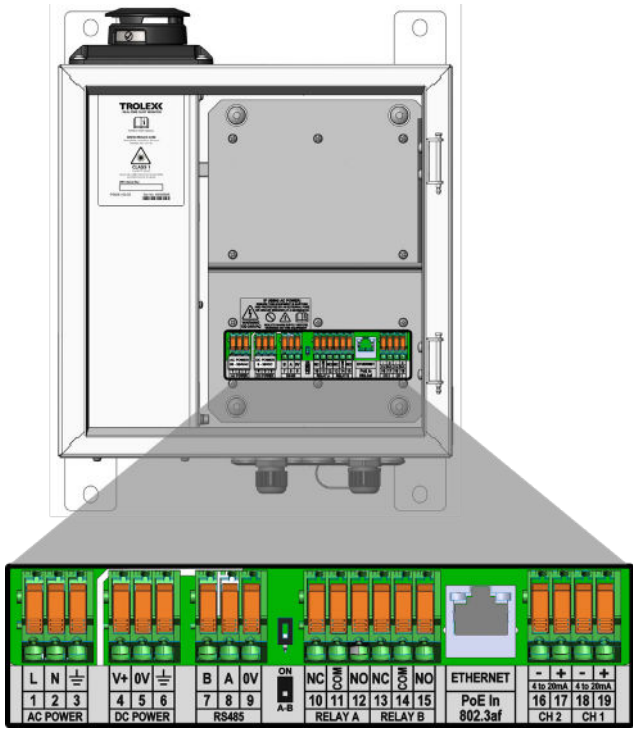

L	N	
1	2	3
Power in		

 ac power input

V+	0 V	
4	5	6
Power in		

dc power input

ac power in		dc power in		Outputs			
1	L	4	V+	10	RELAY A NC	8	RS485 A
2	N	5	0 V	11	RELAY A COM	13	RS485 B
3	Earth	6	Earth	12	RELAY A NO	14	RS485 A
				13	RELAY B NC	15	RS485 0 V
				14	RELAY B COM	17	CH 2
				15	RELAY B NO	16	0 V return
				9	RS485 0 V	18	0 V return
				7	RS485 B	19	CH 1

Power, relay and RS485 terminal connections.



## 8.5 I/O terminals

Power, RS485, 4 mA to 20 mA and relay connection terminal data is highlighted below.


<b>Actuation type</b>	Operating tool
<b>Solid/stranded conductor</b>	0.08 mm <sup>2</sup> to 2.5 mm <sup>2</sup> /28 AWG to 12 AWG
<b>Conductor with ferrule</b>	0.25 mm <sup>2</sup> to 1.5 mm <sup>2</sup>
<b>Strip length</b>	5 mm to 6 mm/0.2 in to 0.24 in

## 8.6 Power connections

For instruments connected to an **ac power supply**, it is the responsibility of the installer to ensure that the instrument is installed with the following protection:

- An external fuse or circuit breaker at a maximum of 5 A
- Externally earthed

See label below for details.

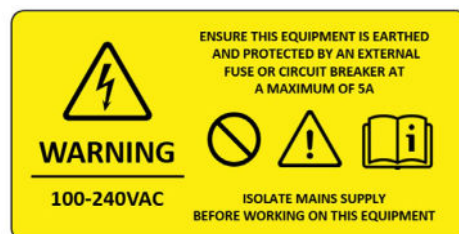


For instruments connected to a **dc power supply**, it is the responsibility of the installer to ensure that the instrument is installed with a dc supply, meeting re-enforced insulation requirements of **EN61010-1** or equivalent.

For instruments connected to an **ac power supply**, ensure that the equipment is protected by an external fuse or circuit breaker at a maximum of 5 A.


8.7 RS485: Output signals

The **AIR XD** provides in and out RS485 terminals to allow ‘daisy-chaining’ of multiple MODBUS devices.

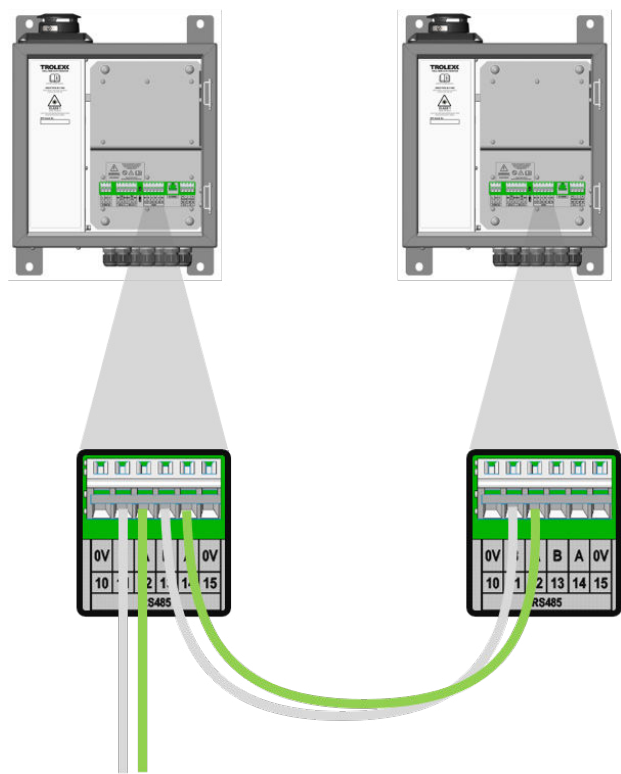

8.8 RS485: Line terminals

Some network installations may require a line termination resistor to be connected across RS485 lines A and B. A 120R resistor is available with SW4 set to off as standard, highlighted below.

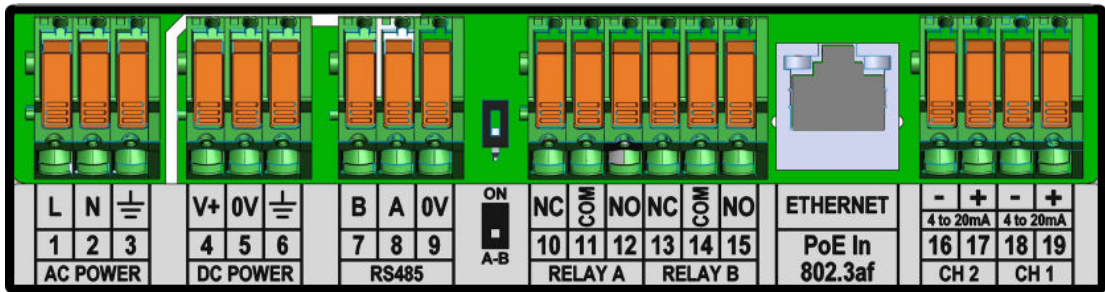

## 9. COMMISSIONING

Once installed and powered for first time use, the **AIR XD** requires some initial parameter set-up via the on-screen user interface. On connection to the communications network, the instrument will be selectable within the Trolex **Breathe** software and will begin to push data to the PC application.

### 9.1 First power on

Prior to commissioning and first use, the instrument should be inspected for any visible damage and integrity of the enclosure.<sup>1</sup> Ensure that the electrical connections are correctly installed, as described in **section 8.3**.

1. Ensure that the door is closed and secured.
2. Apply power to the **AIR XD**.
3. A splash screen will be displayed for several seconds whilst the instrument auto configures.
4. Once configuration is complete, the **AIR XD** will automatically display on screen particle data.
5. Data is automatically logged to the internal memory for data download and offline analysis using the Trolex **BreatheXS** software.

### 9.2 Breathe software



The Trolex **Breathe** software is available for download and installation from Trolex Ltd. or via an authorised distribution partner and is specifically designed for the capture of data sets collected by the **AIR XD** instrument. Installation and commissioning of the Trolex **Breathe** software is covered in a separate user manual and installation guide.

**Note:** The Trolex Breathe software is not required for general on-device **AIR XD** operation and functionality.

## 10. CONTROLS AND INDICATORS


### 10.1 Navigation

The **AIR XD** information software is navigated using the on-device keypad and display. The keypad consists of 4 x directional keys and a central enter key to allow the scrolling, selection and input of data into the instrument.

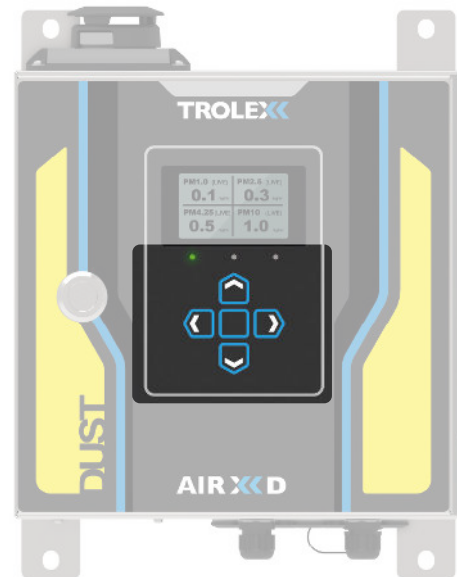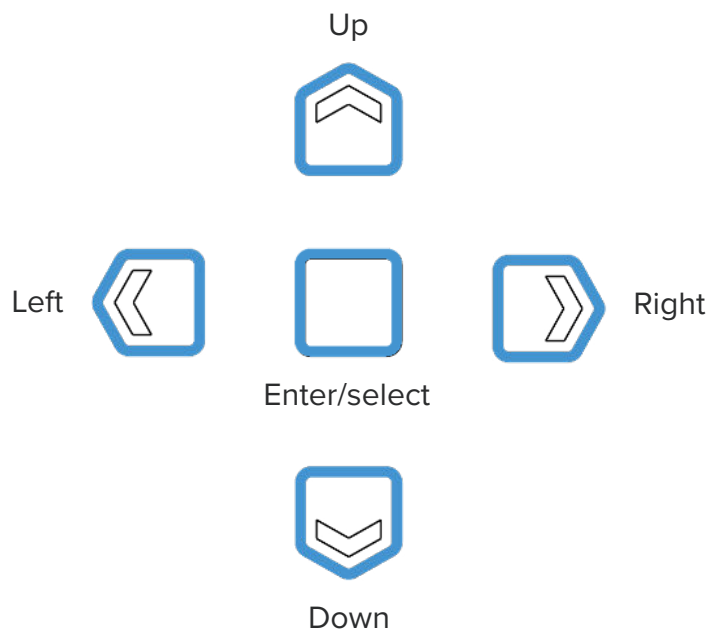


### 10.2 Main function keys

A single press of the 'Up' or 'Down' key is used for the display functions below. Press and hold to incrementally skip through numerical values and release to stop.

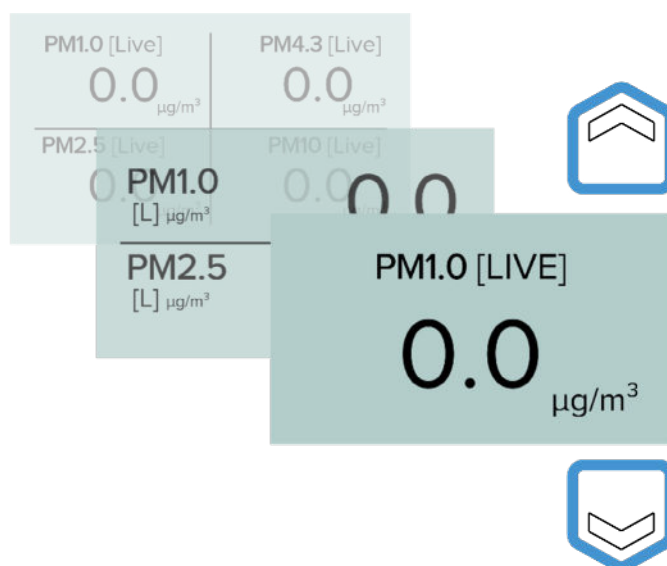

Navigate PM display value screens

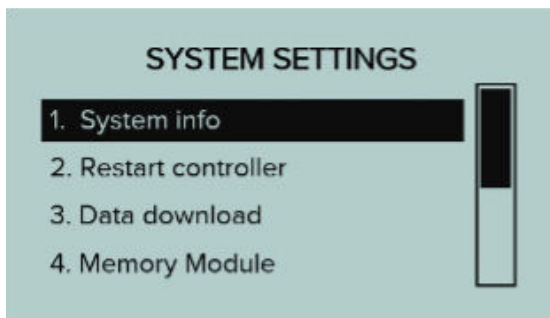

Navigate verticle menu structures



Increment/decrement settings value

A single press of the 'Left' or 'Right' navigation key is used for the display functions below. Press and hold to cycle through previous display screen path and then release to stop on a specific menu screen.



Cycle through "Live", "Average 1" and "Average 2" screens

A single press of the 'Enter' key is used for the display functions below:


1. Go to PM values on data display screens
2. Select highlighted option whilst in menu structures
3. Confirm input value data entry
4. During "Live" data display, press and hold to access the main menu screen

## 11. GENERAL OPERATION

### 11.1 User interface display

On initial power up of the **AIR XD**, particulate sampling will automatically start, and the graphical display will show the following screens. Once the instrument has been configured, with custom values assigned where required, user inputs will be saved in the instrument memory and on consecutive power cycles the **AIR XD** instrument will always display the following start up screens.

**AIR XD** power on > Title card > 'Live' data screen (default to all PM value display).

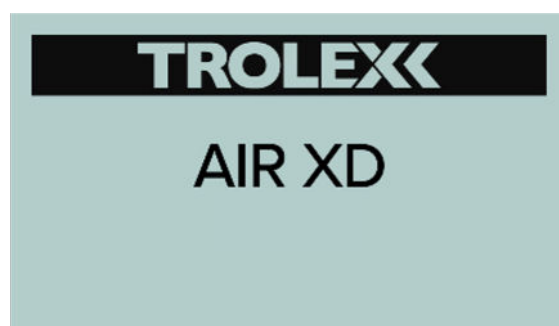

Title screen

PM1.0 [Live] 0.0 $\mu\text{g}/\text{m}^3$	PM4.3 [Live] 0.0 $\mu\text{g}/\text{m}^3$
PM2.5 [Live] 0.0 $\mu\text{g}/\text{m}^3$	PM10 [Live] 0.0 $\mu\text{g}/\text{m}^3$

All PM values "Live" (default landing screen)

### 11.2 PM value display map

The following map details the navigation through the **AIR XD** PM value display screens.

Users can select between the number of PM data channels displayed on screen, 1, 2, 4 or all, alongside the required data channel average ("Live", "Average 1" or "Average 2").

**Title screen****All PM values "Live"**

PM1.0 [Live]	PM4.3 [Live]
0.0 $\mu\text{g}/\text{m}^3$	0.0 $\mu\text{g}/\text{m}^3$
PM2.5 [Live]	PM10 [Live]
0.0 $\mu\text{g}/\text{m}^3$	0.0 $\mu\text{g}/\text{m}^3$

**Dual channel values**

PM4.3 [L] $\mu\text{g}/\text{m}^3$	0.0
PM10.0 [L] $\mu\text{g}/\text{m}^3$	0.0

PM1.0 [L] $\mu\text{g}/\text{m}^3$	0.0
PM2.5 [L] $\mu\text{g}/\text{m}^3$	0.0

**Single channel values**

PM1.0 [LIVE]
0.0 $\mu\text{g}/\text{m}^3$

PM2.5 [LIVE]
0.0 $\mu\text{g}/\text{m}^3$

PM4.3 [LIVE]
0.0 $\mu\text{g}/\text{m}^3$

PM10.0 [LIVE]
0.0 $\mu\text{g}/\text{m}^3$

TPC [LIVE]
0 counts

**List channel values**

PM1.0 [Live]	0.0 $\mu\text{g}/\text{m}^3$
PM2.0 [Live]	0.0 $\mu\text{g}/\text{m}^3$
PM4.3 [Live]	0.0 $\mu\text{g}/\text{m}^3$
PM10.0 [Live]	0.0 $\mu\text{g}/\text{m}^3$
TSP	0.0 $\mu\text{g}/\text{m}^3$

## 11.3 Top cap closed



If the top cap is 'closed', then the live data will not be displayed.

Instead, a warning will be shown on screen with the backlight being set to red. The device settings can be accessed by pressing the 'Enter' key. When the top cap is opened then the screens will return to the live data display.



## 11.4 Settings structure

The following settings can be configured within the **AIR XD** settings menu by selecting the required field. When highlighted, press the 'Enter' key to access.

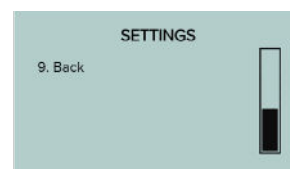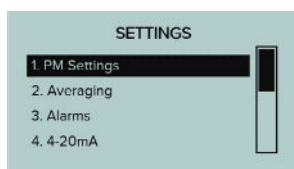

Each settings menu allows users to access the following information or selection options:

- **PM settings**

Configure and select custom PM values/ranges and map against instrument channels.

- **Averaging**

Configure and select averaging periods for PM values.

- **Alarms**

Configure and select on-device alarm functionality.

- **Communications**

Configure and select instrument communications protocols.

- **Display**

Configure the on-device display and graphical interface.

- **Date and time**

Configure the instrument date and time settings.

- **System**

Review, configure and update the instrument system settings.




## 11.5 Passcode protection



The device settings are passcode protected by default. Whenever a setting is changed then the user must enter a passcode before the change of setting is saved and implemented.

**Note:** By default the passcode is set to “1234”

The passcode is entered using the ‘up’ and ‘down’ keys to increment/decrement the digit. The ‘left’ and ‘right’ keys are used to change the selected digit. Once the code has been entered, press the ‘enter’ key.


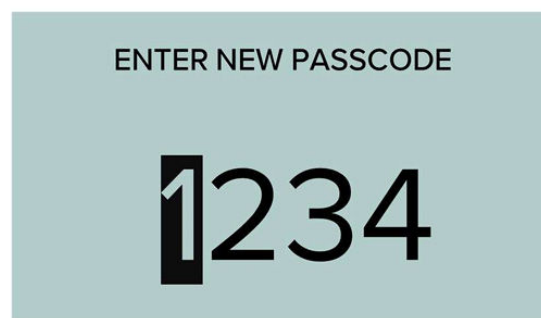


If the passcode entered is correct, then the change of settings will be changed. If the passcode is incorrect then the settings will remain unchanged.

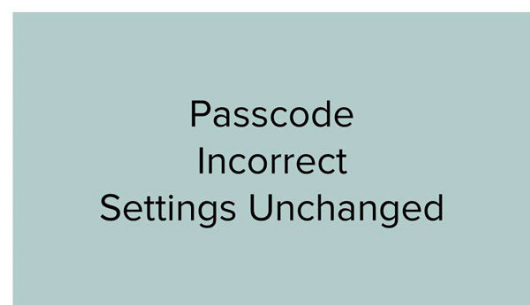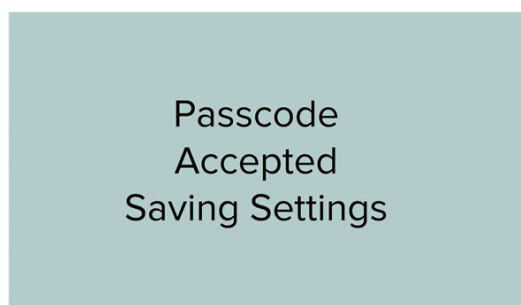


## 11.6 Change passcode

The settings passcode can be changed to a custom value using the “System” menu. Once the user has entered the new passcode they will be required to enter the previous passcode before the change takes place.

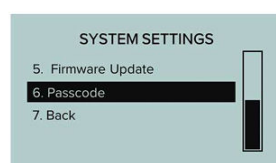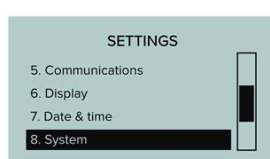

## 11.7 ‘Enable’/‘Disable’ passcode protection

Passcode protection of the device settings is enabled by default but can be disabled and re-enabled using the on-screen menus.

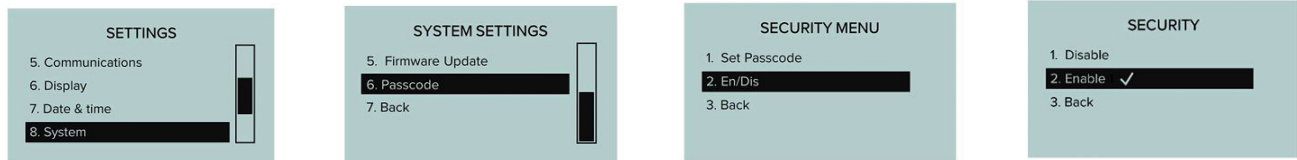


## 11.8 PM settings

Configure and map PM sizes against selected Channels (“Ch1” to “Ch4”).

PM values can be set to range from 1  $\mu\text{m}$  to 10  $\mu\text{m}$ . Users can choose to display either  $\text{mg}/\text{m}^3$  or  $\mu\text{g}/\text{m}^3$  for all available channels.


**Note:** The instrument logs data in  $\mu\text{g}/\text{m}^3$ .

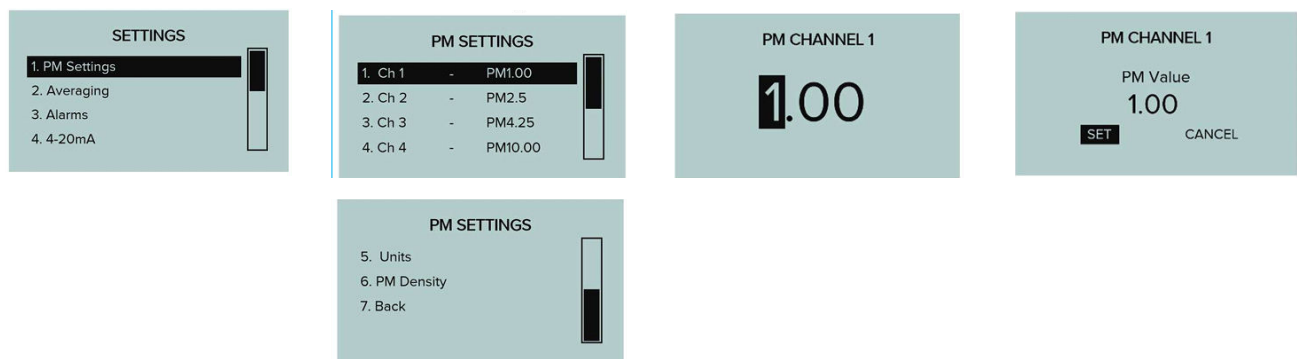

## 11.9 Setting custom PM values

The following map details the navigation through the **AIR XD** user interface screens to set and configure custom PM values against Channel 1 to 4, including TSP.


'Settings' > 'PM settings' > Select Channel for configuration

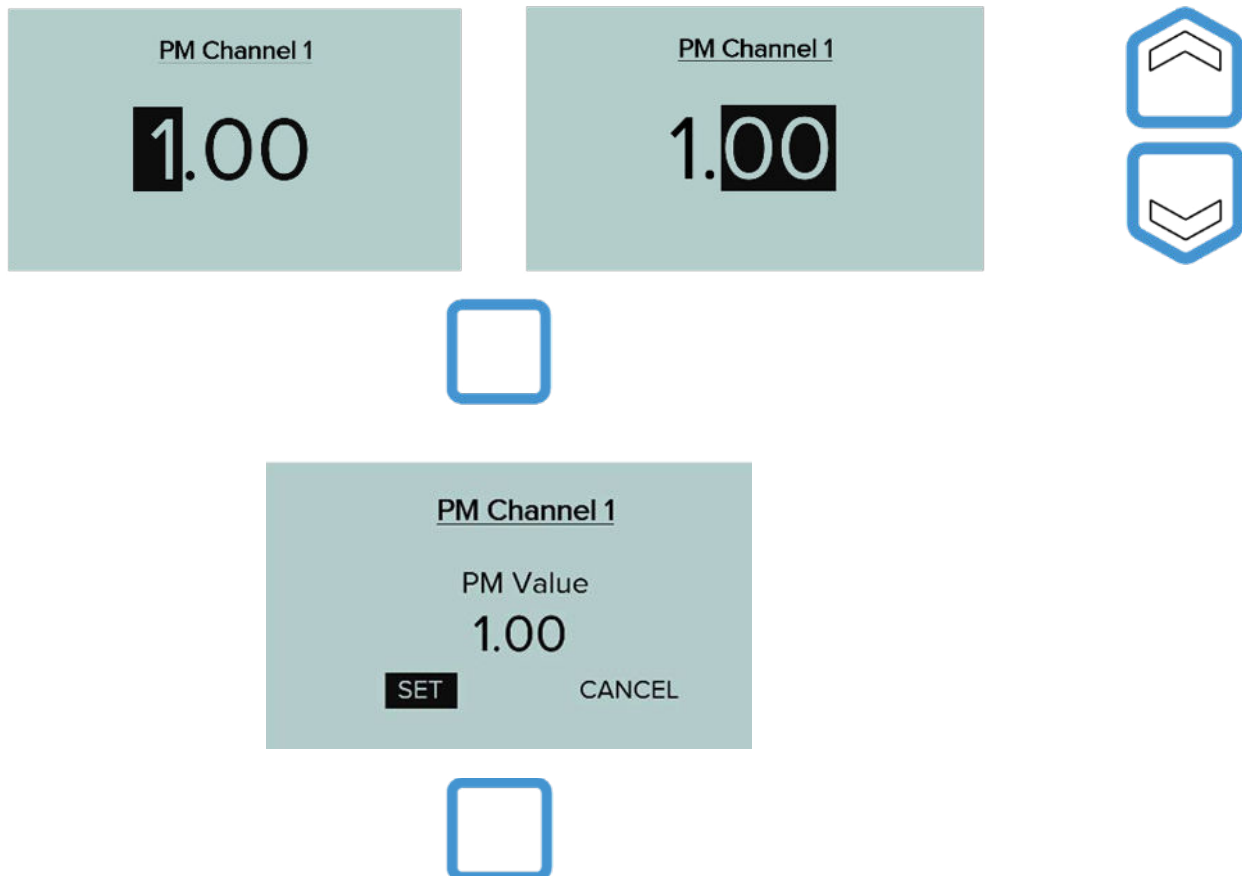

## 11.10 PM density


Allows the user to set a custom PM density value for known particulates in the installation environment.

**Note:** The **AIR XD** uses a PM density value to calculate the mass of known particulates in the installation environment (1.65 g/ml as default).

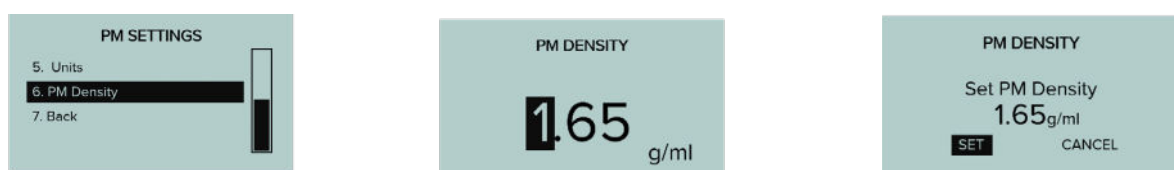


## 11.11 Averaging settings

These averaging settings allow the user to set custom STEL and TWA periods.

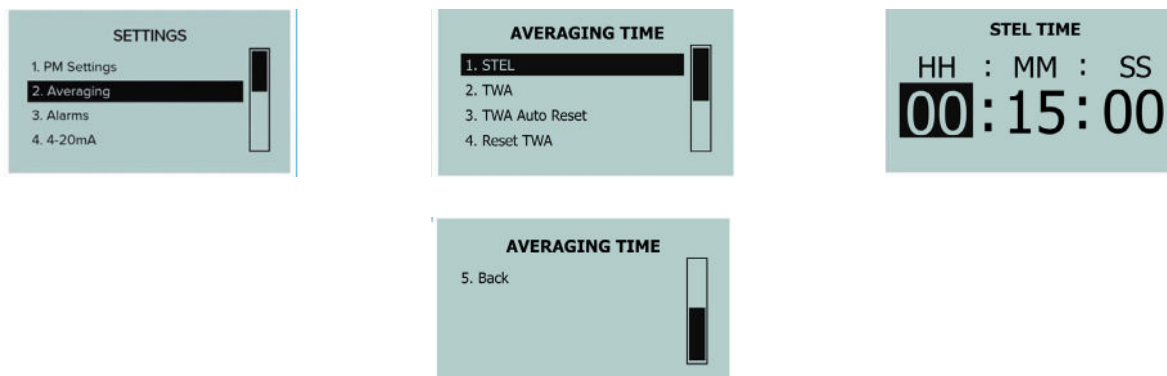

Select 'TWA Auto Reset' from the menu below.

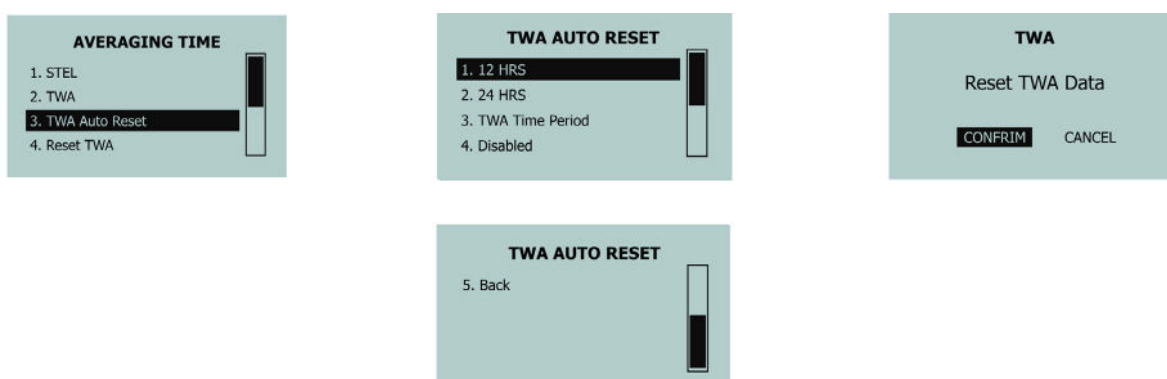

## 11.12 Alarm settings

The **AIR XD** offers 2 x user configurable alarms. Each alarm requires 4 parameters to be selected and configured. All alarms are logged in the **AIR XD** event log.

- **Assigned a PM size/channel (PM1.0, PM2.5, PM4.25, PM10.0 and TSP)**

Select one of the 4 configured PM sizes or TSP as the alarm source.

- **Assigned a data source/channel**

Select whether to act on live data readings or one of the pre-configured averages (15 minutes to 8 hours).

- **Assigned a threshold ( $\mu\text{g}/\text{m}^3$  and  $\text{mg}/\text{m}^3$ )**

Set the value at which the alarm will trigger ( $1 \mu\text{g}/\text{m}^3$  to  $9,999 \mu\text{g}/\text{m}^3$  or  $0.1 \text{mg}/\text{m}^3$  to  $6553.5 \text{mg}/\text{m}^3$ ).

- **Assigned latching or non-latching behaviour**

Choose whether the alarm stays active once the fault condition is cleared or is self-clearing (non-latching). For non-latching selections, alarms will be cleared but the event will be logged.


**Note:** Once the alarm is triggered, the corresponding relay will then switch, and an alarm message is displayed on screen



### 11.13 Channel select

The **AIR XD** has 2 x alarm channels that can be assigned one of 4 particulate sizes or TSP.


**Note:** The current applied value is highlighted by the 'selection tick'.

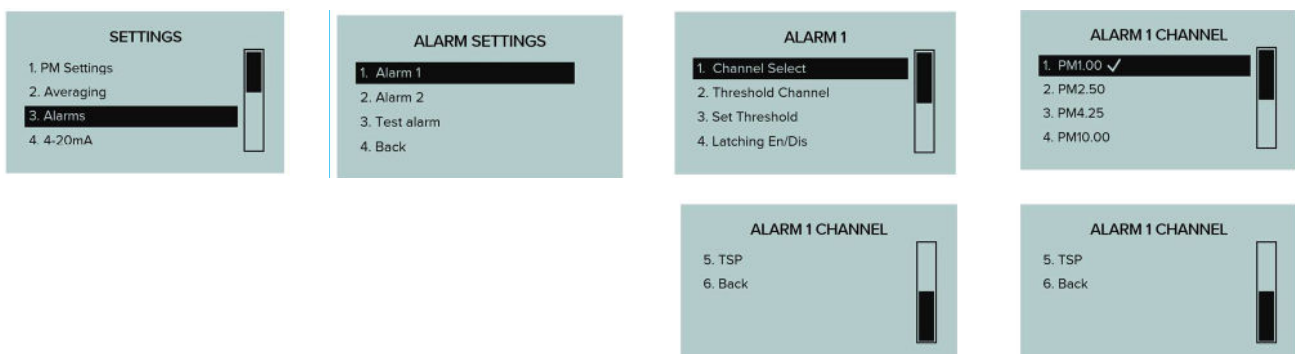

## 11.14 Threshold hannel


Select and assign an alarm to a specified data source.

**Note:** The current applied value is highlighted by the 'selection tick'.

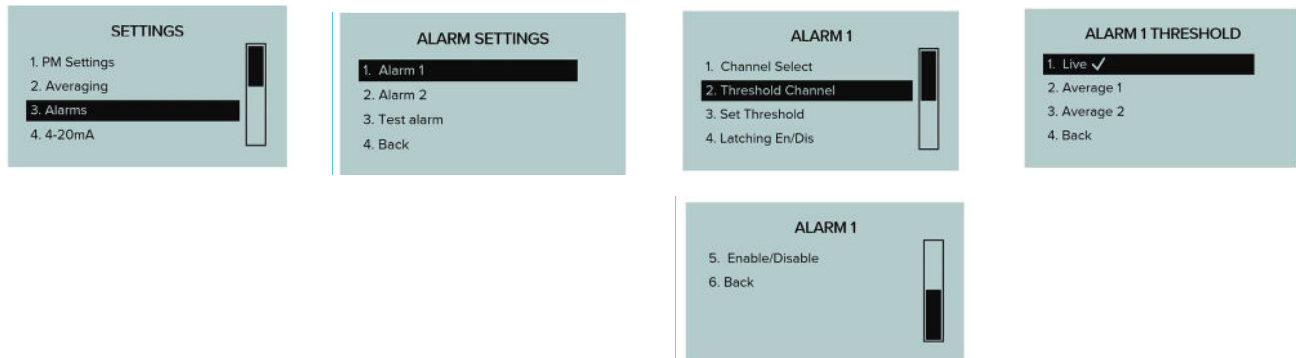

## 11.15 Set alarm threshold


Set the threshold value, which activates the alarm. Threshold values can be configured between  $1 \mu\text{g}/\text{m}^3$  to  $9999 \mu\text{g}/\text{m}^3$  or  $0.1 \text{ mg}/\text{m}^3$  to  $6553.5 \text{ mg}/\text{m}^3$ .

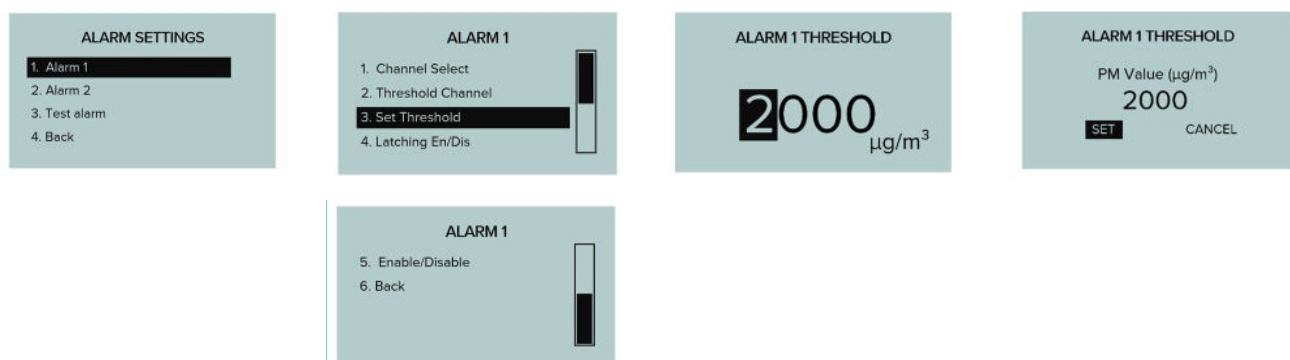

## 11.16 Alarm latching

Configure the latching behaviour for selected alarm.


**Note:** The current applied value is highlighted by the 'selection tick'.

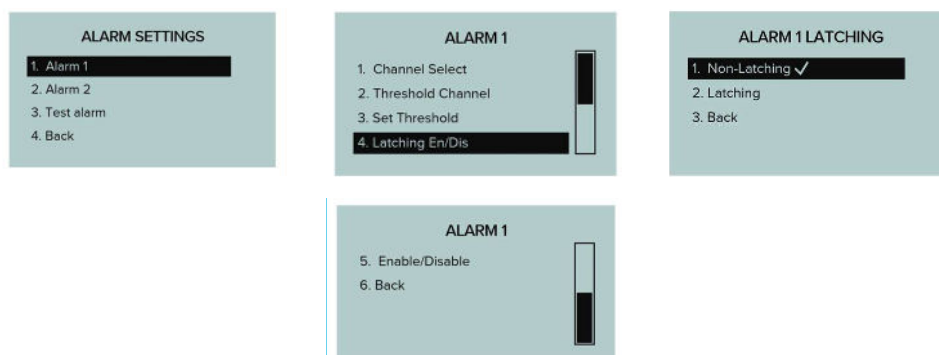

## 11.17 ‘Enable’/‘Disable’ alarm

Enable to disable audio-visual alarms for selected alarm.

**Note:** The current applied value is highlighted by the ‘selection tick’.

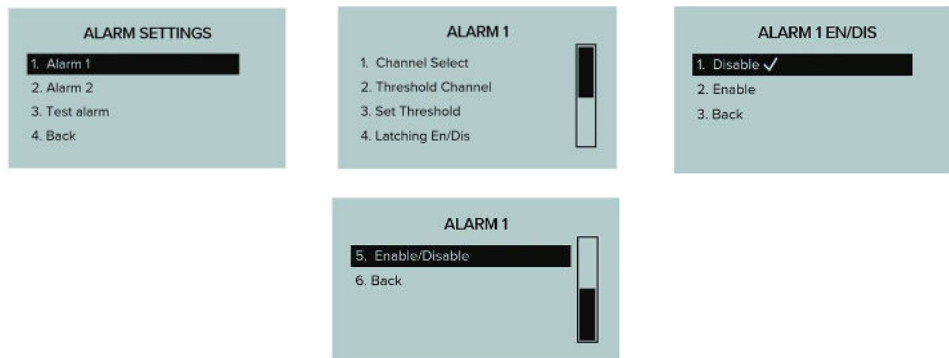

## 11.18 4 mA to 20 mA outputs

The **AIR XD** offers 2 x 4 mA to 20 mA outputs. Each 4 mA to 20 mA output requires 2 parameters to be selected and configured to determine the functionality of each analogue output.

- **Assigned a PM size/channel (PM1.0, PM2.5, PM4.25, PM10.0 and TSP)**  
Select one of the 4 configured PM sizes or TSP as the alarm source.
- **Assigned a data channel (“Live”, “Average 1” or “Average 2”)**  
Select one of the 3 data sets to assign the selected 4 mA to 20 mA output to.
- **Assigned the full-scale range of the channel**  
A full-scale range of 2000  $\mu\text{g}/\text{m}^3$ , for example, will output 20 mA for a value greater or equal to 2000  $\mu\text{g}/\text{m}^3$ , and a value of 0  $\mu\text{g}/\text{m}^3$  will always have an output of 4 mA.
- **“Enable”/“Disable” the channel**  
A disabled channel will output 0 mA.


During instrument start up and initialisation, each 4 mA to 20 mA output will perform a calibration routine, which involves sweeping the output from 0 to 20 mA before returning to 4 mA.

- After this has been completed, the output will return to configured functionality.

## 11.19 Select PM channel


The **AIR XD** has 2 x 4 mA to 20 mA outputs that can be assigned to one of four particulate sizes or TSP.

**Note:** The current applied value is highlighted by the ‘selection tick’.

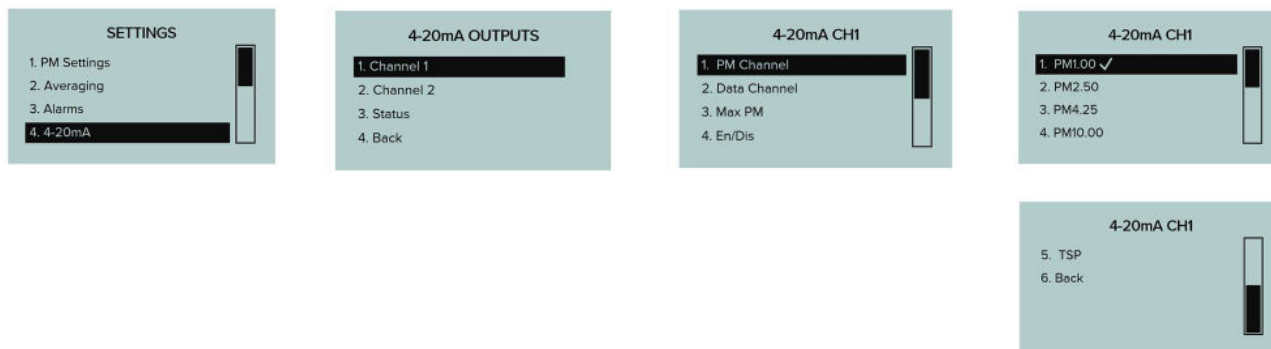

## 11.20 Map 4 mA to 20 mA to data channel

Map the selected 4 mA to 20 mA output to the required data channel (“Live”, “Average 1” or “Average 2”).

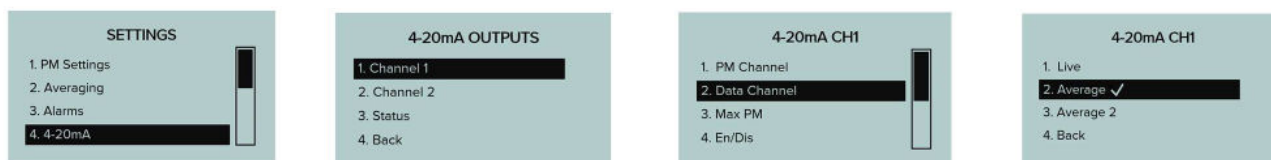

## 11.21 Set maximum PM value

Set the 4 mA to 20 mA scaling range for each 4 mA to 20 mA output. ( $0 \mu\text{g}/\text{m}^3$  to  $9999 \mu\text{g}/\text{m}^3$  or  $0.1 \text{ mg}/\text{m}^3$  to  $6553 \text{ mg}/\text{m}^3$ ).






## 11.22 Select PM channel


Enable or disable 4 mA to 20 mA outputs.

**Note:** The current applied value is highlighted by the 'selection tick'.

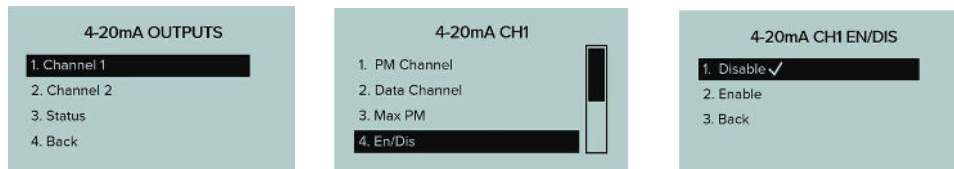

## 11.23 Status

Check the overview status of the 4 mA to 20 mA channels.

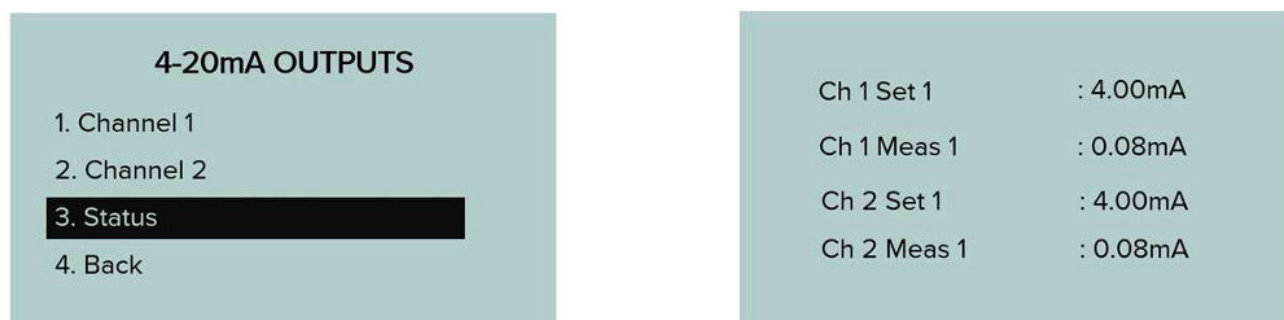

## 11.24 Communications

The **AIR XD** offers 2 selectable communications protocols, RS485 MODBUS and Ethernet MODBUS TCP/IP secured by TLS 1.2, that can be used to configure and network the instrument.

Each communication protocol requires the network and connection parameters to be correctly configured on the instrument and network where applicable.

## 11.25 Ethernet communications


The **AIR XD** supports communications over ethernet MODBUS TCP/IP. Ethernet communications requires configuration of the parameters shown in the system menus below to establish successful communication with the designated server.

A separate setup guide is available from Trolex Ltd. The following is an overview of the ethernet communications in the device.

**Note:** The MODBUS TCP/IP communicates over 'Port 502'. 'Settings' > 'Communications' > 'Ethernet'


## 11.26 Network status

Check the overview status of the connected network.

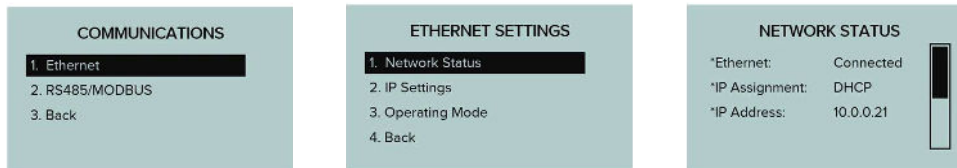

## 11.27 IP settings

The **AIR XD** IP settings can be configured based on application requirements. From the 'IP Settings' menu users can select and configure the following.

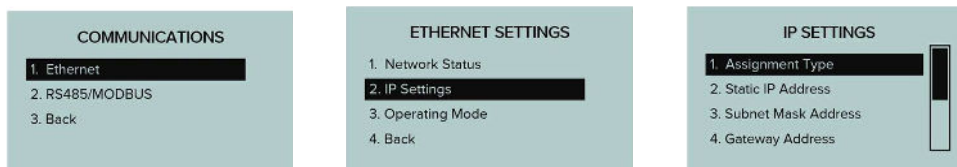


- Assignment type
- Static IP address
- Subnet mask address
- Gateway address
- Primary DNS
- Secondary DNS

## 11.28 Ethernet operation mode


The **AIR XD** can be configured to communicate via MODBUS TCP direct to a PC or server running a MODBUS client.

**Note:** Selection of the Trolex|Core option allows the data recorded by the **AIR XD** instrument to be pushed direct to an installed and running Trolex|Core API server. (Not yet implemented.)

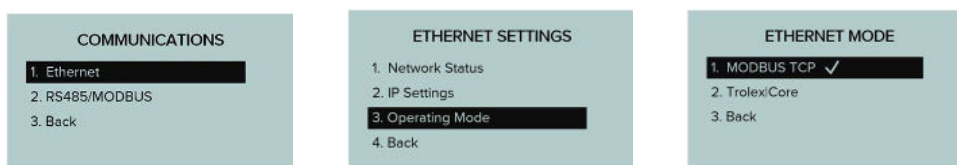

## 11.29 Ethernet connection status

The connection status of the **AIR XD** can be viewed by pressing the 'left' arrow key from the "PM Value" readings screen. The status screen lists the connection type, connection status and instrument IP address.

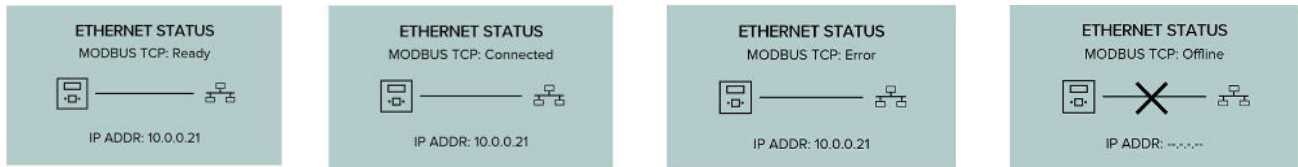

## 11.30 RS485 MODBUS communications

The **AIR XD** has configurable MODBUS baud rates and a user-configurable address. It is possible to configure the MODBUS device address and baud rate through the on-device display menu.


'Settings' > 'Communications' > 'RS485/MODBUS'

### 11.31 Set baud rate

The **AIR XD** instrument baud rate can be selected and assigned from a pre-configured list of options.

**Note:** The current applied value is highlighted by the 'selection tick'.

- 4800
- 9600
- 14400
- 19200
- 38400
- 57600
- 115200 (default)

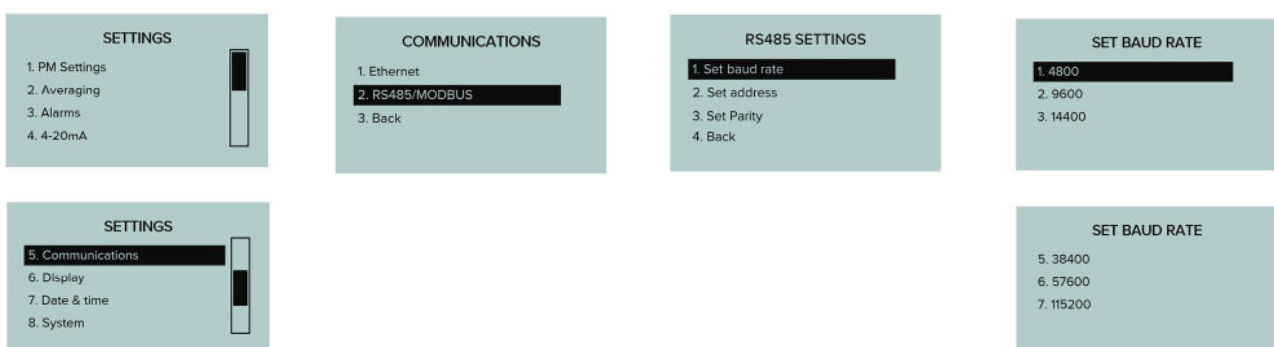

### 11.32 Set device address


The **AIR XD** instrument address is user selectable and can be configured between 001 and 255.



### 11.33 Set communications parity

The **AIR XD** instrument parity bit can be selected and assigned from a pre-configured list of options.

**Note:** The current applied value is highlighted by the ‘selection tick’.

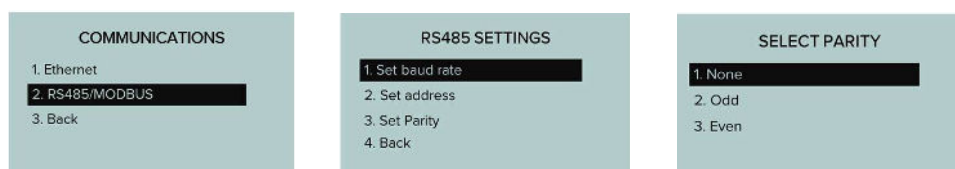


### 11.34 Display

The **AIR XD** has a 128 x 64 dot matrix display with backlight. Users can select and configure display contrast, backlight colour and brightness. It is also possible to set power saving mode with display sleep functionality.


### 11.35 Adjusting display contrast

The **AIR XD** display can be adjusted to align the contrast ratios with the installation environment.

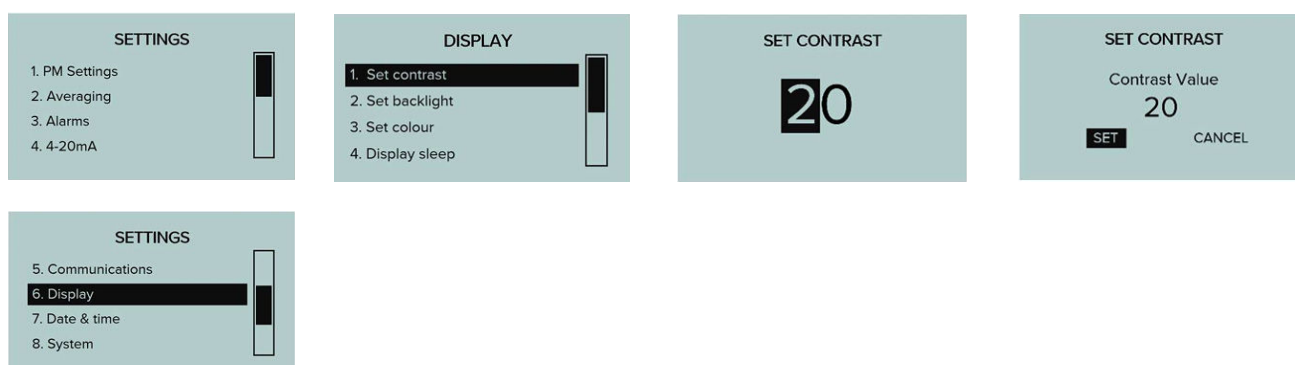


## 11.36 Set display backlight

The **AIR XD** display can be adjusted to align the backlight brightness with the installation environment.

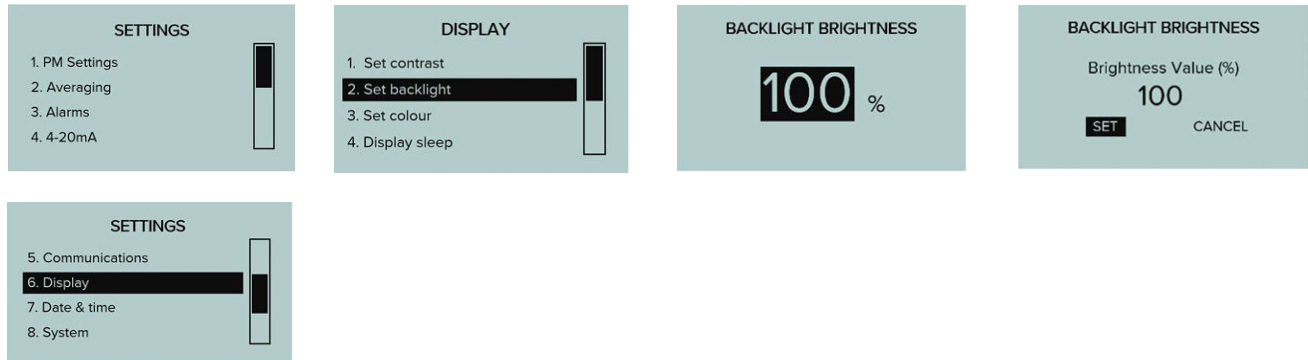


## 11.37 Set display colour

The **AIR XD** display can be adjusted to configure the on-screen colour profile.



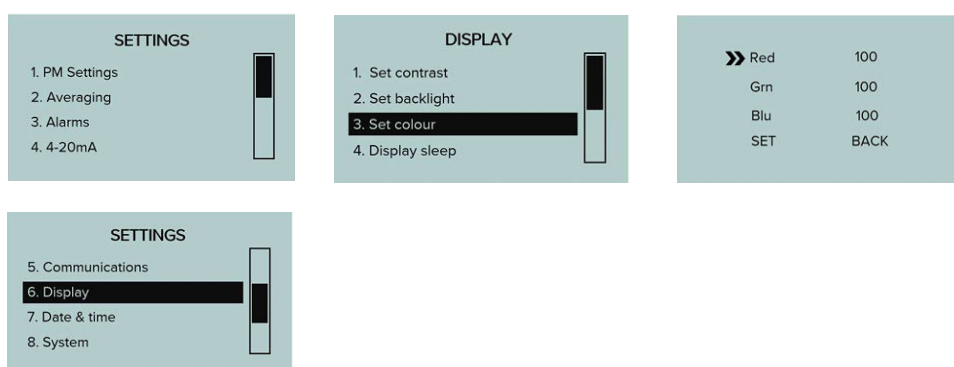


## 11.38 Set display sleep

The **AIR XD** display can be set to enter sleep mode to allow for power saving where required.

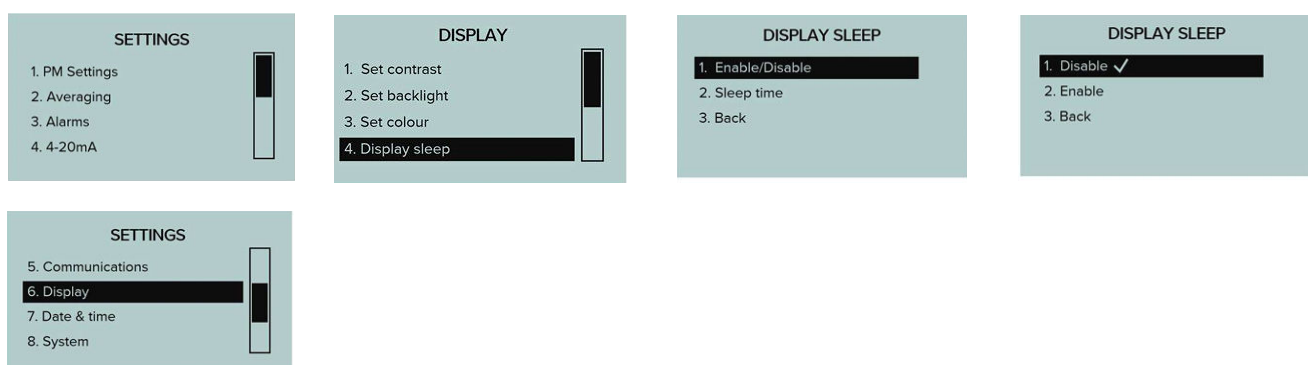

The **AIR XD** display can also be configured to sleep after a chosen time period.

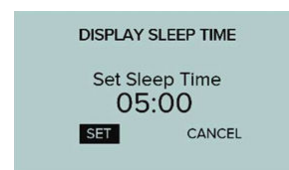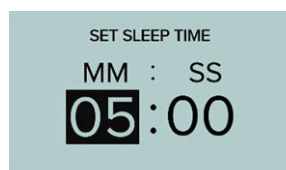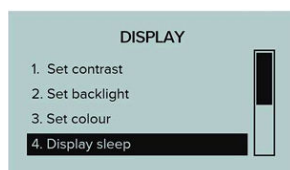




## 11.39 Date and time

The **AIR XD** date and time can be configured to suit the installation location.

### 11.40 Set date



Configure and edit the date stamp logged by the **AIR XD** instrument.

**Note:** Date format DD/MM/YYYY.

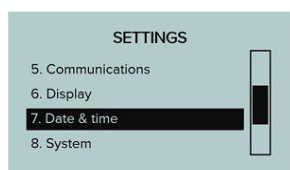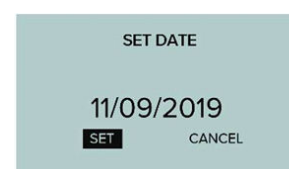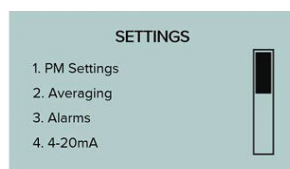

### 11.41 Set date

Configure and edit the time stamp logged by the **AIR XD** instrument.

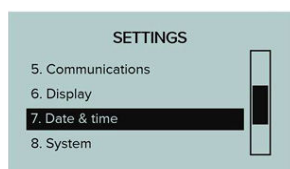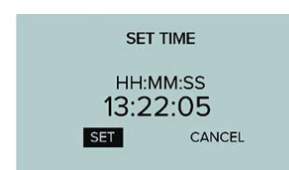


## 11.42 System

The **AIR XD** 'System' menu allows users to access system performance, serial information, update firmware and restart the instrument.


## 11.43 System information

The 'System info' menu allows users to view the functional status of the **AIR XD** instrument.

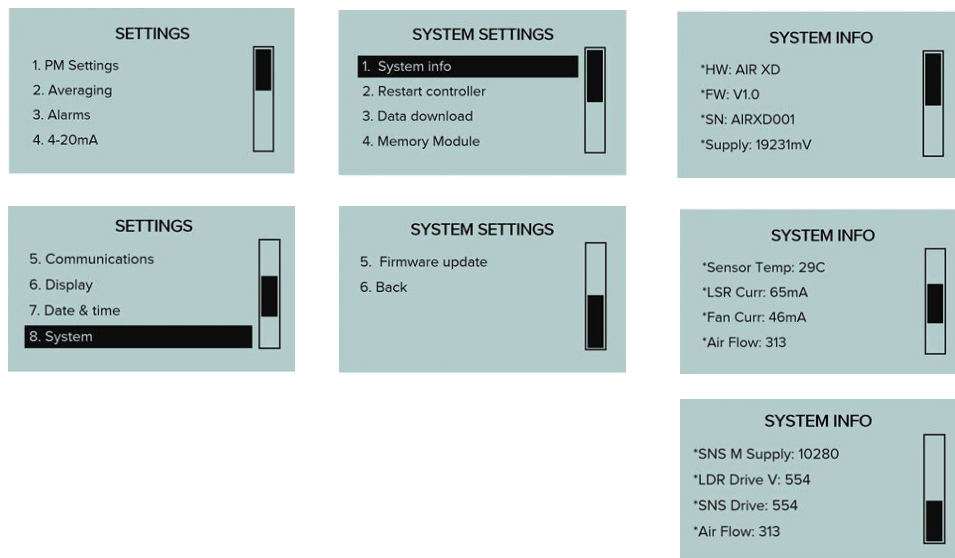

## 11.44 Restart controller

The **AIR XD** instrument can be forced to restart and reboot through the 'Restart controller' menu.

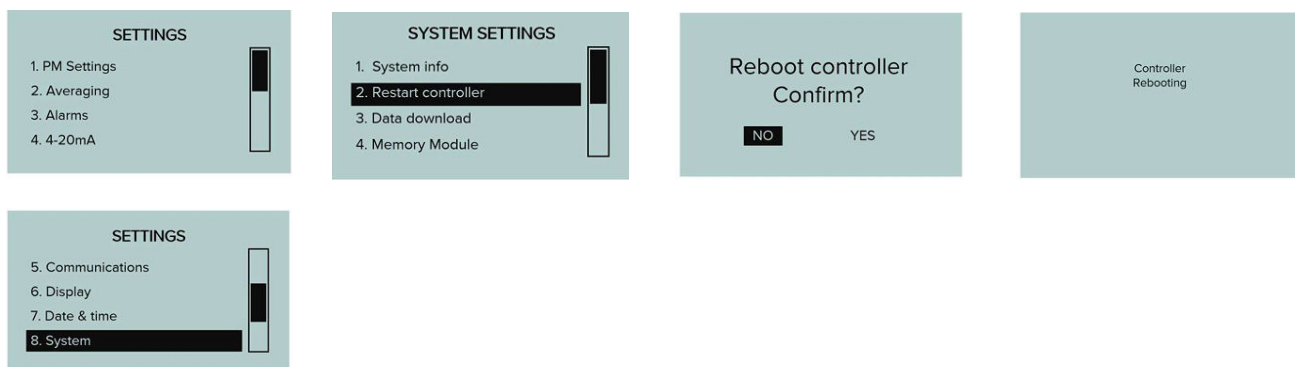


## 11.45 Data download

The **AIR XD** allows users to download collected data sets via the 'Data Download' menu. Data is stored on the instrument internal memory and can be locally downloaded onto a removable USB device when connected via the external USB connector positioned at the base of the instrument.


**Note:** It is recommended that a USB with at least 8 GB of storage capacity is used for local data download. The **AIR XD** only supports FAT32 file formatted USB devices. Trolex recommends the use of a dedicated USB device formatting tool, such as AOMEI Partition Assistant or similar when converting large storage sizes to FAT32 file format.

- Collected data can be retrieved from the **AIR XD** instrument by either selecting the 'Download All' or 'Download New' data sets.
- Selecting the 'Download All' tab will notify users of the number and total size of the files to be downloaded.
- Selecting the 'Download New' tab will notify users of the number and total size of the files to be downloaded.\*

**Note:** \*This function works based on reading the last file name downloaded to the connected USB device and only downloading the data set recorded after the last download.

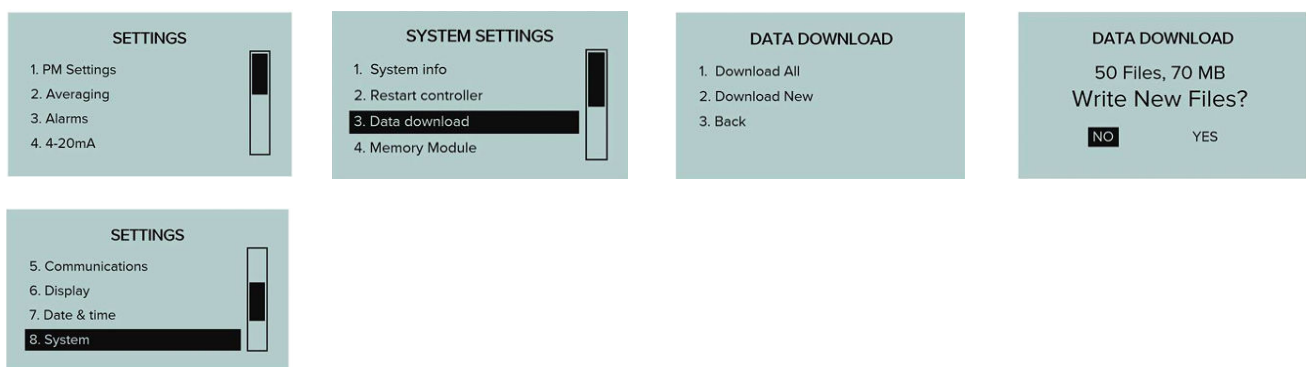

Data download functionality is only available when a remote USB device is connected to the **AIR XD**. The following screen will be displayed if a USB device is not connected or cannot be identified by the instrument.

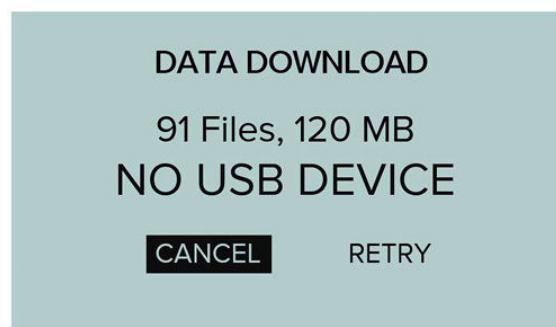

## 11.46 Memory module


The **AIR XD** contains an internal memory module that is used to locally store collected data sets on the instrument. The module can be configured from the settings menu to allow local data collection to take place or to stop the **AIR XD** from writing to the internal memory.

For the majority of applications, the internal memory module will be used and configured to allow the **AIR XD** instrument to locally store data as well as push data to the **AIR X** software via selected communications channels.




For applications that may require power saving functionality, the internal memory module can be de-selected.

**Note:** The current selection is highlighted by the 'selection tick'.

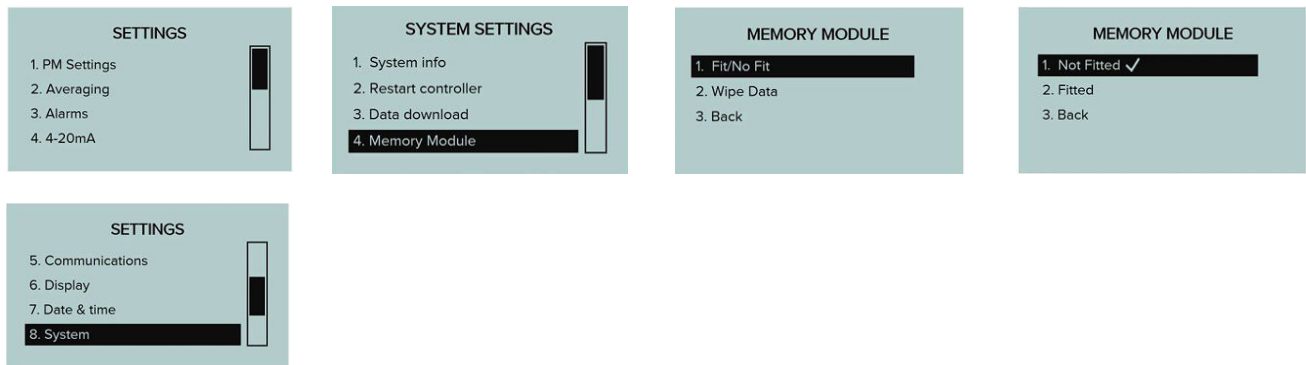


The internal memory module contains 8 GB of storage capacity, which, depending on the frequency of data collected and written, may require clearing. To clear the data set stored on the instrument, follow the on-screen functions detailed below.

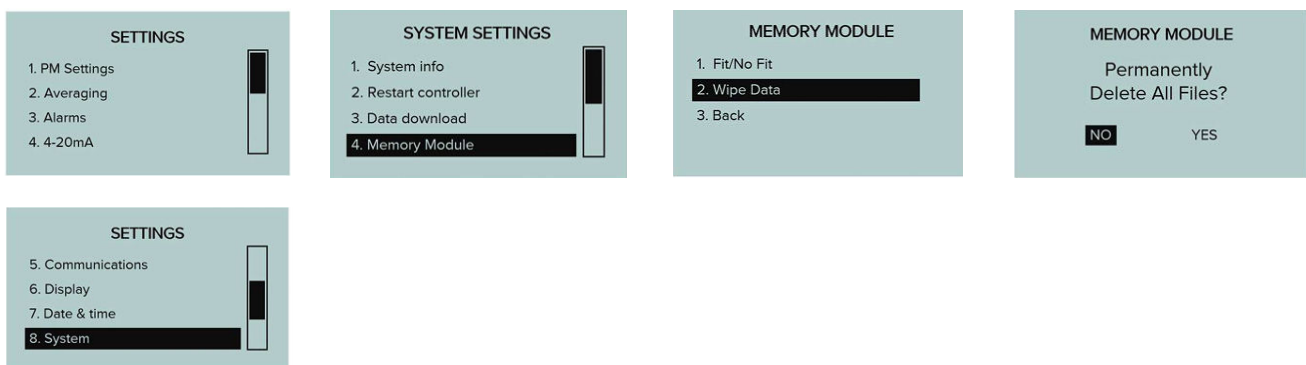

## 11.47 Firmware update

On notification of a firmware update and release, the **AIR XD** and internal memory module can be updated via the firmware update menu below. The instrument requires the update to take place via the connection of an external USB device loaded with the latest firmware.

See **section 13** for full details on how to update for full details on how to update the firmware of the device.

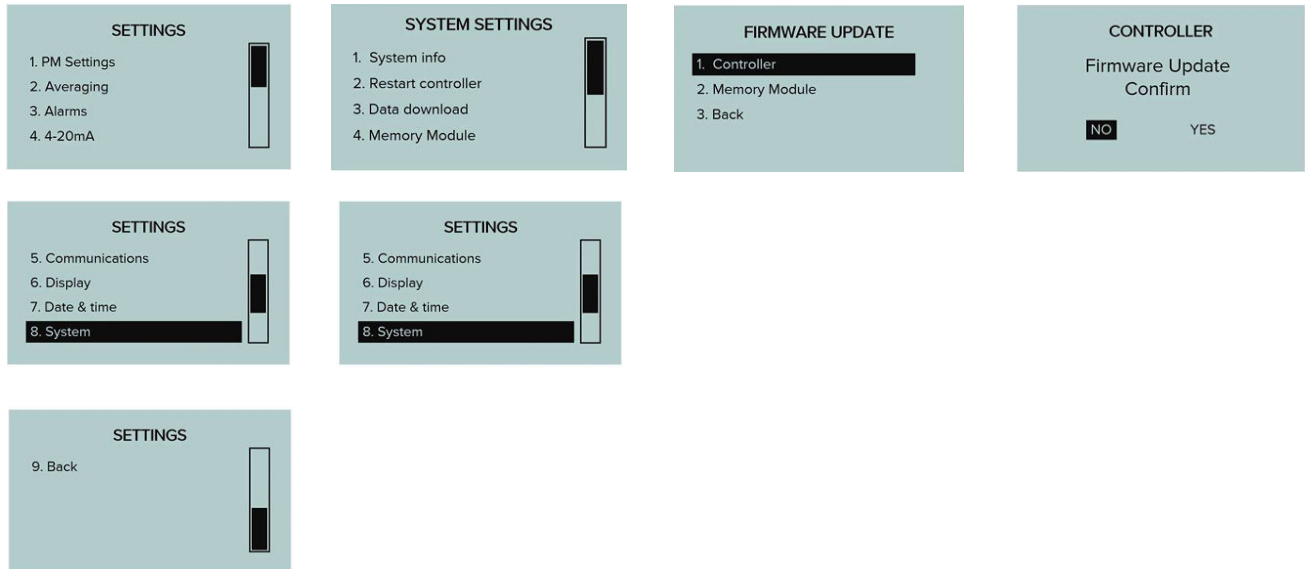

## 11.48 Relay override

If the alarms are enabled, in normal operation the relays will switch over if the assigned alarm threshold is exceeded. In some applications it may be necessary to override the relays to switch on a piece of equipment manually even if the alarm threshold has not been exceeded. To allow this functionality, coil registers (13 and 14) are provided for overriding the relays.

To move a relay to the normally open position, write '1' to the corresponding relay. To place the relays back under the control of the alarms by writing '0' to the relay.

The relays can also be overridden even when the alarms are disabled.

## 11.49 Watchdog

The **AIR XD** contains an electronic watchdog to detect and recover from malfunctions without requiring input from the user. Once a device anomaly or malfunction has been detected, the unit will automatically implement a restart sequence.

The instrument will take up to 10 seconds to initiate a soft reset. On recovery from a soft reset, the time based averages are restored and the instrument will continue to log data from the point recorded before the watchdog reset.

**Note:** In the event of a hard reset, time based averages are reset to factor default (removal of power, then re-application).

## 12. INSTRUMENTATION CONFIGURATION

### 12.1 Default settings

The **AIR XD** has been programmed with factory default settings prior to delivery, which are detailed in the table below.

Number of channels	5
PM values	PM1.0, PM2.5, PM4.25, PM10 and TSP
Data averaging time 1	15 minutes
Data averaging time 2	8 hours
Display units	$\mu\text{g}/\text{m}^3$
RS485 baud rate	115200
RS485/MODBUS	Enabled
Ethernet	MODBUS TCP/IP
4 mA to 20 mA range	0 $\mu\text{g}/\text{m}^3$ to 2000 $\mu\text{g}/\text{m}^3$ or 0 $\text{mg}/\text{m}^3$ to 6553.5 $\text{mg}/\text{m}^3$
4 mA to 20 mA	Mapped to average data
Alarms	Disabled
Alarm thresholds	1000 $\text{mg}/\text{m}^3$
Alarm 1	'Channel 3'
Alarm 2	'Channel 4'
Alarm latching	Enabled

### 12.2 On-site configuration

The **AIR XD** instrument can be configured to user requirements following the procedures outlined in section 11, using the on-device screen and buttons/user interface. The **Breathe** software also supports on-site custom configuration.

## 12.3 MODBUS registers

The **AIR XD** contains the following three MODBUS registers:

### “Input Register” (function code “4”)

This is a read-only register containing factory programmed instrument parameters, including serial numbers, firmware versions and live data sets.

Register	Description	Data type	Units
0	Product TX number	Unit16_t	
1	Firmware version (major)	Unit16_t	
2	Firmware version (minor)	Unit16_t	
3	Firmware version (patch)	Unit16_t	
4	Serial number (characters 1 and 2)	Char	Ascii format
5	Serial number (characters 3 and 4)	Char	
6	Serial number (characters 5 and 6)	Char	
7	Serial number (character 7 and 18)	Char	
8	Serial number (characters 9 and 10)	Char	
9	Bin 0 $\mu\text{m}$ to 0.46 $\mu\text{m}$	Unit16_t	Counts
10	Bin 1 $\mu\text{m}$ to 0.66 $\mu\text{m}$	Unit16_t	Counts
11	Bin 2 $\mu\text{m}$ to 0.89 $\mu\text{m}$	Unit16_t	Counts
12	Bin 3 $\mu\text{m}$ to 1.17 $\mu\text{m}$	Unit16_t	Counts
13	Bin 4 $\mu\text{m}$ to 1.47 $\mu\text{m}$	Unit16_t	Counts
14	Bin 5 $\mu\text{m}$ to 1.80 $\mu\text{m}$	Unit16_t	Counts
15	Bin 6 $\mu\text{m}$ to 2.5 $\mu\text{m}$	Unit16_t	Counts
16	Bin 7 $\mu\text{m}$ to 3.5 $\mu\text{m}$	Unit16_t	Counts
17	Bin 8 $\mu\text{m}$ to 4.51 $\mu\text{m}$	Unit16_t	Counts
18	Bin 9 $\mu\text{m}$ to 5.76 $\mu\text{g}/\text{m}$	Unit16_t	Counts
19	Bin 10 $\mu\text{m}$ to 7.25 $\mu\text{g}/\text{m}$	Unit16_t	Counts

Register	Description	Data type	Units
20	Bin 11 $\mu\text{m}$ to 9 $\mu\text{g}/\text{m}$	Uint16_t	Counts
21	Bin 12 $\mu\text{m}$ to 11 $\mu\text{m}$	Uint16_t	Counts
22	Bin 13 $\mu\text{m}$ to 13 $\mu\text{m}$	Uint16_t	Counts
23	Bin 14 $\mu\text{m}$ to 15.01 $\mu\text{m}$	Uint16_t	Counts
24	Bin 15 $\mu\text{m}$ to 17.01 $\mu\text{m}$	Uint16_t	Counts
25	Bin 16 $\mu\text{m}$ to 19.02 $\mu\text{m}$	Uint16_t	Counts
26	Bin 17 $\mu\text{m}$ to 21.02 $\mu\text{m}$	Uint16_t	Counts
27	Bin 18 $\mu\text{m}$ to 5.76 $\mu\text{g}/\text{m}$	Uint16_t	Counts
28	Bin 19 $\mu\text{m}$ to 26.51 $\mu\text{g}/\text{m}$	Uint16_t	Counts
29	Bin 20 to 29.51 $\mu\text{g}/\text{m}$	Uint16_t	Counts
30	Bin 21 $\mu\text{m}$ to 32.51 $\mu\text{g}/\text{m}$	Uint16_t	Counts
31	Bin 22 $\mu\text{m}$ to 35.51 $\mu\text{g}/\text{m}$	Uint16_t	Counts
32	Bin 23 $\mu\text{m}$ to 38.51 $\mu\text{g}/\text{m}$ (140 $\mu\text{g}/\text{m}$ extended)	Uint16_t	Counts
33	Sampling period	Uint16_t	Counts
34	Sample flow rate	Uint16_t	0.01 ml/s/bit
35	Sensor temperature	Uint16_t	0.01 $^{\circ}\text{C}/\text{bit}$
36	Sensor humidity	Uint16_t	0.01%/bit
37	PM A size (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
38	PM A size (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
39	PM B size (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
40	PM B size (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
41	PM C size (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
42	PM C size (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
43	PM D size (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$


Register	Description	Data type	Units
44	PM D size (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
45	TSP (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
46	TSP (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
47	PM A 'Average 1' (lower 16 bits)		
48	PM A 'Average 1' (upper 16 bits)		
49	PM B 'Average 1' (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
50	PM B 'Average 1' (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
51	PM C 'Average 1' (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
52	PM C 'Average 1' (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
53	PM D 'Average 1' (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
54	PM D 'Average 1' (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
55	TSP (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
56	TSP (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
57	PM A 'Average 2' (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
58	PM A 'Average 2' (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
59	PM B 'Average 2' (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
60	PM B 'Average 2' (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
61	PM C 'Average 2' (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
62	PM C 'Average 2' (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
63	PM D 'Average 2' (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
64	PM D 'Average 2' (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
65	TSP (lower 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
66	TSP (upper 16 bits)	Float32_t	$\mu\text{g}/\text{m}^3$
67	<b>AIR XD</b> supply voltage	Unit16_t	mv/bit

Register	Description	Data type	Units
68	Laser current/mA	Unit16_t	mv/bit
69	Fan current/mA	Unit16_t	mv/bit
70	Status register	Unit16_t	

## 12.4 Reading floating point registers

MODBUS itself does not define a floating point data type but it is industry standard to use the IEEE-754 standard for defining floating point numbers. There is, however, there is no clear-cut definition of the byte order of the data payload.

By default, the Trolex **AIR XD** uses a little-endian format for the floating point numbers split across 2 16-bit MODBUS registers. If this is not compatible with your system and a big endian format or byte swapping is required, the byte ordering can be switched using the on-device menus as shown below.

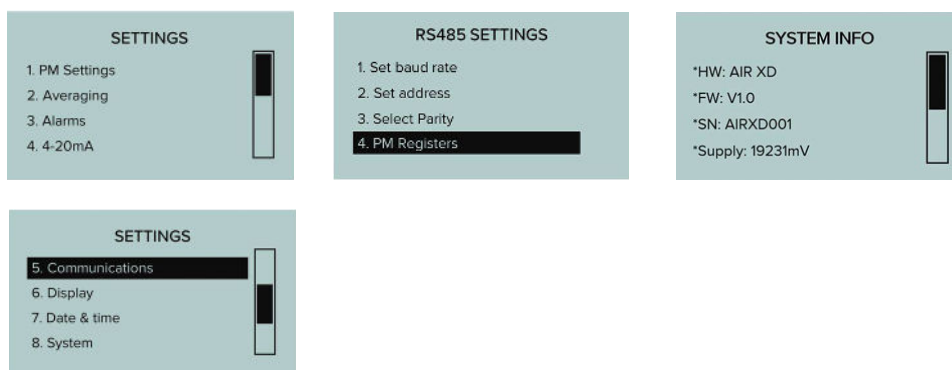

The order of the byte forming the floating-point registers can also be configured remotely through writing to the coil registers.

Coil registers 16 and 17 enact this functionality with the logic table outlined below.

Coil register 16	Coil register 17	Floating point register
0	0	Big endian
0	1	Big endian byte swap
1	0	Little endian
1	1	Little endian byte swap

## 12.5 Coil register

- Function code **'1'** read
- Function code **'5'** write

This is a read/write register containing the instrument binary settings, including alarm status, PM units and 4 mA to 20 mA output 'Enable'/'Disable' status.

Writing to this register will result in the setting being changed permanently. However, if an alarm is activated, writing to the alarm status coil will dismiss the active alarm until the alarm threshold parameters have been re-exceeded.

Register	Description	Data type	Units
0	'Channel 1' alarm status	Bool	
1	'Channel 2' alarm status	Bool	
2	'Channel 1' alarm latch	Bool	1: Latch , 2: Auto-reset
3	'Channel 2' alarm latch	Bool	1: Latch 2: Auto-reset
4	'Channel 1' alarm mute	Bool	
5	'Channel 2' alarm mute	Bool	
6	PM units	Bool	0: $\mu\text{g}/\text{m}^3$ 1: $\text{mg}/\text{m}^3$
7	Reserved for future use	Bool	0: Not fitted 1: Fitted
8	Memory module fitted	Bool	0: Not fitted 1: Fitted
9	4 mA to 20 mA 'Channel 1' ('Enable'/'Disable')	Bool	0: Disabled 1: Enabled
10	4 mA to 20 mA 'Channel 2' ('Enable'/'Disable')	Bool	0: Disabled 1: Enabled
11	Top cap status (read only)	Bool	0: Open 1: Closed
12	Alarm 'Channel 1' ('Enable'/'Disable')	Bool	0: Disabled 1: Enabled



Register	Description	Data type	Units
13	Alarm 'Channel 2' ('Enable'/'Disable')	Bool	0: Disabled 1: Enabled
14	Relay 1 override	Bool	0: Relay under alarm 1: Relay override active
15	Relay 2 override	Bool	0: Relay under alarm 1: Relay override active
16	Floating point data endianness	Bool	0: Big endian 1: Little endian
17	Floating point data byte swap	Bool	0: No byte swap 1: Byte swapping enabled

## 12.6 Holding register

- Function code '3' read
- Function code '6' write

This is a read/write register containing the instrument settings and parameters, including instrument date, time, PM assignment and MODBUS settings. Writing to this register will result in the setting being changed permanently.

**Note:** Writing to the MODBUS settings will result in communication errors until the user has changed their local instrument MODBUS parameters to match the new setting selected on the

**AIR XD.**

Register	Description	Data type	Units
0	Time (second)	Unit16_t	
1	Time (minute)	Unit16_t	
2	Time (hour)	Unit16_t	
3	Time (day)	Unit16_t	
4	Time (month)	Char	

Register	Description	Data type	Units
5	Time (year)	Char	
6	UTC offset (minute)	Char	
7	UTC offset (hour)	Char	
8	PM A assignment	Char	x 100
9	PM B assignment	Uint16_t	x 100
10	PM C assignment	Uint16_t	x 100
11	PM D assignment	Uint16_t	x 100
12	Alarm assignment 1	Uint16_t	0: PM A live 1: PM B live 2: PM C live 3: PM D live 4: TSP live 5: PM A Av 1 6: PM B Av 1 7: PM B Av 2 8: PM D Av 1 9: TSP Av 1 10: PM A Av 2 11: PM B Av 2 12: PM C Av 2 13: PM D Av 2 14: TSP Av 2
13	Alarm assignment 2	Uint16_t	0: PM A live 1: PM B live 2: PM C live 3: PM D live 4: TSP live 5: PM A Av 1 6: PM B Av 1 7: PM B Av 2 8: PM D Av 1 9: TSP Av 1 10: PM A Av 2 11: PM B Av 2 12: PM C Av 2 13: PM D Av 2 14: TSP Av 2
14	Alarm 1 threshold	Uint16_t	As $\mu\text{g}/\text{m}^3$
15	Alarm 2 threshold	Uint16_t	As $\mu\text{g}/\text{m}^3$

Register	Description	Data type	Units
16	4 mA to 20 mA 'Channel 1' assignment	Uint16_t	0: PM A 3: PM D
17	4 mA to 20 mA 'Channel 2' assignment	Uint16_t	0: PM A 3: PM D
18	4 mA to 20 mA 'Channel 1' scaling	Uint16_t	
19	4 mA to 20 mA 'Channel 2' scaling	Uint16_t	
20	4 mA to 20 mA 'Channel 1' time	Uint16_t	As minutes
21	4 mA to 20 mA 'Channel 2' time	Uint16_t	As minutes
22	Alarm 2 assignment	Uint16_t	0: 4800 1: 9600 2: 14400 3: 19200 4: 38400 5: 57600 6: 115200
23	MODBUS address	Uint8_t	

## 12.7 Instrument self-test

On initial power on, the **AIR XD** is programmed to perform a set of initialisation tests, which are listed and described below. Throughout general function, the **AIR XD** will periodically perform these tests to ensure correct operation.

- **OPC sensor communications check**

Ensures communications and correct functionality of the OPC sensor.

- **OPC temperature sensor test**

Ensures the OPC sensor is operating within the specified safe temperature limits.

- **4 mA to 20 mA self-test**

During instrument start up and initialisation, each 4 mA to 20 mA output will perform a calibration routine which involves sweeping the output from 0 mA to 20 mA before returning to 4 mA. After this has been completed, the output will return to configured functionality.


- **Data logging comms test**

Ensures communications and correct functionality of the **AIR XD** memory module.

- **EEPROM memory test**

Ensures communications and functionality of the EEPROM is correct and that custom defined user settings are not lost.

## 13. UPDATING FIRMWARE

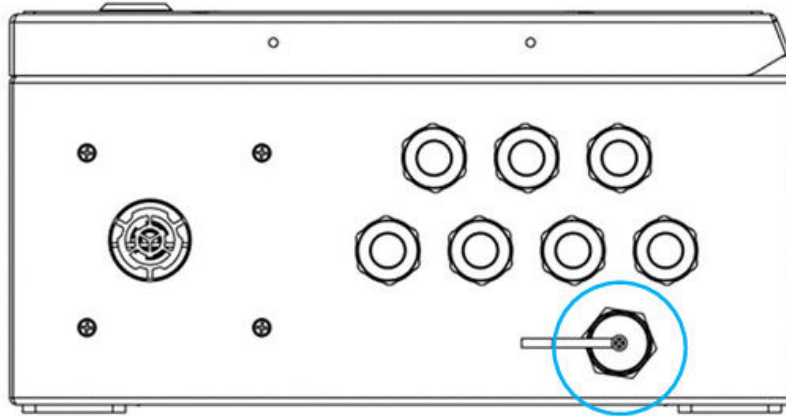

### 13.1 Units with controller v1.2.3 or earlier and/or memory module v1.4 or earlier

Updating the firmware will result in loss of data download. Ensure that all data is downloaded from the unit before an update is undertaken.

After the memory module has been updated, data logging will only commence after the memory module has been cleared using the on-device menus, the steps for which are outlined in **section 11.46**.


### 13.2 Preparation

The following steps should be taken prior to updating the instrument:

1. Format a memory stick to **FAT32** file system.
2. Copy the firmware files provided by Trolex or an approved distributor onto the formatted memory stick. The controller files have the format "P5628.704\_xx\_cont.hex" and the memory module files have the format "P5628.705\_xx\_mm.hex" (where "xx" is the firmware revision).
3. Insert the USB drive into the **AIR XD** USB interface connector, the display background will turn green on successful pairing with the device.

### 13.3 Steps to update the controller


1. Navigate to the firmware update menu as shown below and then select the “Controller” on the select device menu.

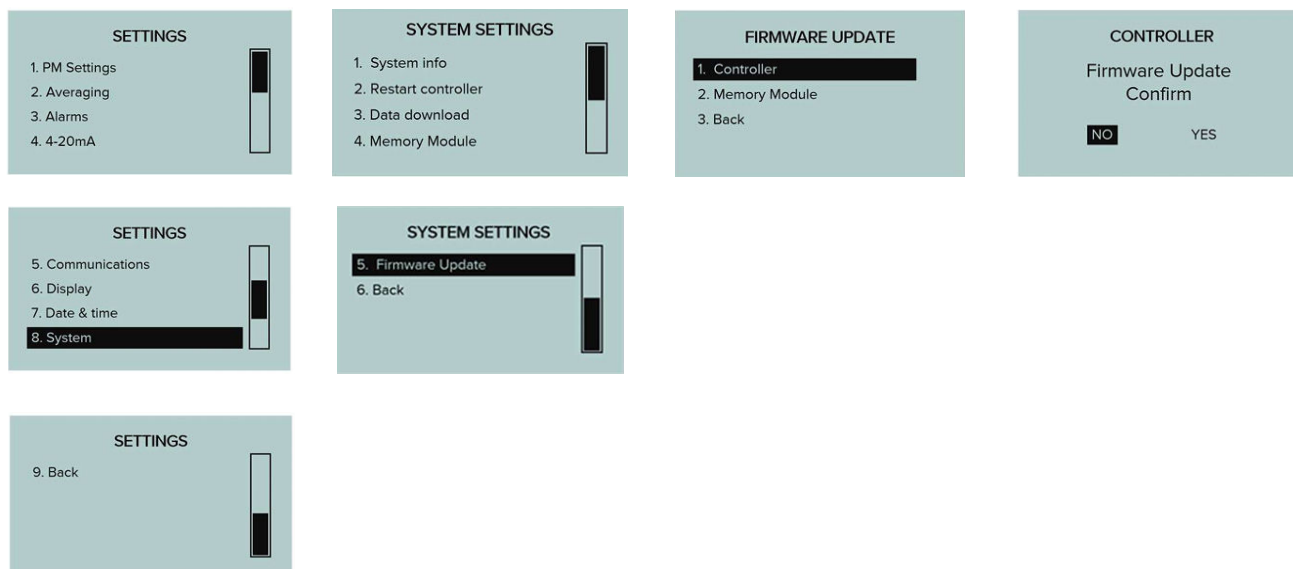

2. Press “YES” to confirm the update, and the controller will then clear the memory in anticipation for the update and a screen will display “Receiving Packet x of x”. Once this is underway, it can take up to 30 minutes to receive all data packets.
3. Once all packets have been received, the unit will restart and perform the update. During this time the screen will go blank for up to 60 seconds. **Do not remove power during this time.**
4. When the update is complete, the unit will reboot, and the new version number will be displayed on the start-up screen and in the ‘System Info’ screen.

## 13.4 Steps to update the memory module

1. Navigate to the firmware update menu as per controller update. Selecting the Memory Module on the select device screen.
2. Press 'YES' to confirm the update, the memory module will then begin receiving data from the USB device. The display will show a message reading 'Receiving Data...'
3. The firmware update should take no longer than 60 seconds. If the update is a success, a confirmation screen is shown and the user is presented with a "Confirm unit restart" message.
4. Press 'Confirm' on unit restart and the instrument will reboot. To view the new memory module firmware version, navigate to the system info screen as shown below:

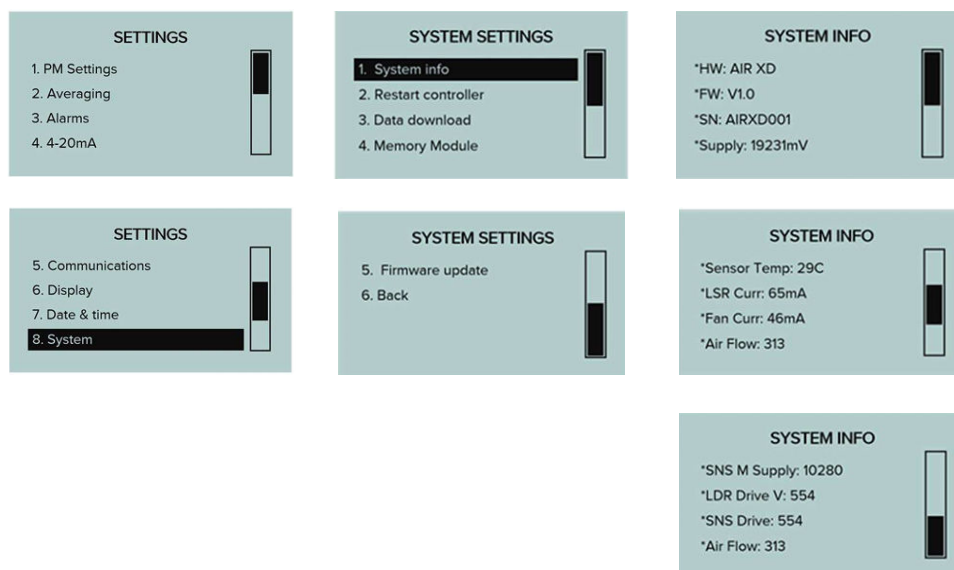

**Note:** When updating the memory module firmware, all saved data log files will be lost and overwritten. Please ensure all data has been locally downloaded from the unit before proceeding.

After the firmware update, ensure that the 'Wipe data' function has been performed before resuming normal operation.

## 14. MAINTENANCE

The maintenance of the **AIR XD** must only be carried out by competent personnel. Maintenance should be considered with reference to the local safety regulations, authorities, and guidelines.

### 14.1 Visual checks

Periodic visual checks should be carried out to assess if there are any issues arising with the **AIR XD** instrument. Check for:

1. External damage to the instrument. Plastic parts should not be cracked or broken, which could affect the IP rating of the instrument.
2. Internal or external damage to wiring that is connected to the **AIR XD** instrument.
3. Labels on the instrument are still in place and are not peeling or discolouring.

### 14.2 Cleaning checks

It is recommended to periodically clean the instrument with a damp cloth, to ensure the display, keypad and rating labels are clean and legible.

### 14.3 Air entry/exit apertures

The **AIR XD** has been designed to allow for infrequent pressure washing during maintenance schedules.

**Note:** Ensure inlet cap is closed before pressure washing the **AIR XD** instrument.

It is important that an appropriate distance is kept between a pressure washer and all **AIR XD** surfaces when cleaning to avoid any damage to the surface being cleaned. Care should also be taken to ensure that the underside of the instrument is not subject to the direct water jet to ensure that water does not enter the air flow path.

The air exit aperture is protected by a stainless steel grille to minimise the ingress of debris into the instrument. It is recommended that the grille is checked and cleaned during maintenance periods.

### 14.4 Filter replacement

It is recommended that the **AIR XD** is installed with location and proximity consideration to atomising dust suppression systems.

Instrument readings will include atomised or misted sizes that pass through the **AIR XD** sensor, within the particle detection range.



## 14.5 Preventative maintenance

Dust loading	Average dust loading in mg/m <sup>3</sup>	Expected maintenance schedule
Low	Up to 5 mg/m <sup>3</sup>	6 to 12 months
Medium	Up to 10 mg/m <sup>3</sup>	3 to 6 months
High	10 mg/m <sup>3</sup> or above	1 to 3 months

Particulate types and operating environments vary, therefore the maintenance schedules above should be used as a guide only.

An assessment of site environmental and operating conditions should be carried out periodically to assess the required maintenance.

## 14.6 Sensor cleaning

As part of the routine maintenance schedule, it is recommended that the sensor is cleaned from time to time following the steps below.

1. Wipe down the **AIR XD** inlet surfaces with a damp cloth in both 'open' and 'closed' positions.
2. Using canned compressed clean air, spray the device inlet for 10 to 15 seconds to clean the dust path.




## 14.7 Compliance audit check

The **AIR XD** has been designed with an in-built compliance audit routine/test to allow for the infrequent checking of device functionality against a selection of sized reference particulates.

The on-device compliance audit routine must be carried out using the Trolex Compliance Audit Kit, which contains the accessories required to conduct the procedure, including:

- Particle dispersion hood
- Reference particle sizes (reference material)
- Dosing bottle

The following on-device compliance audit check menu sequence will be presented.

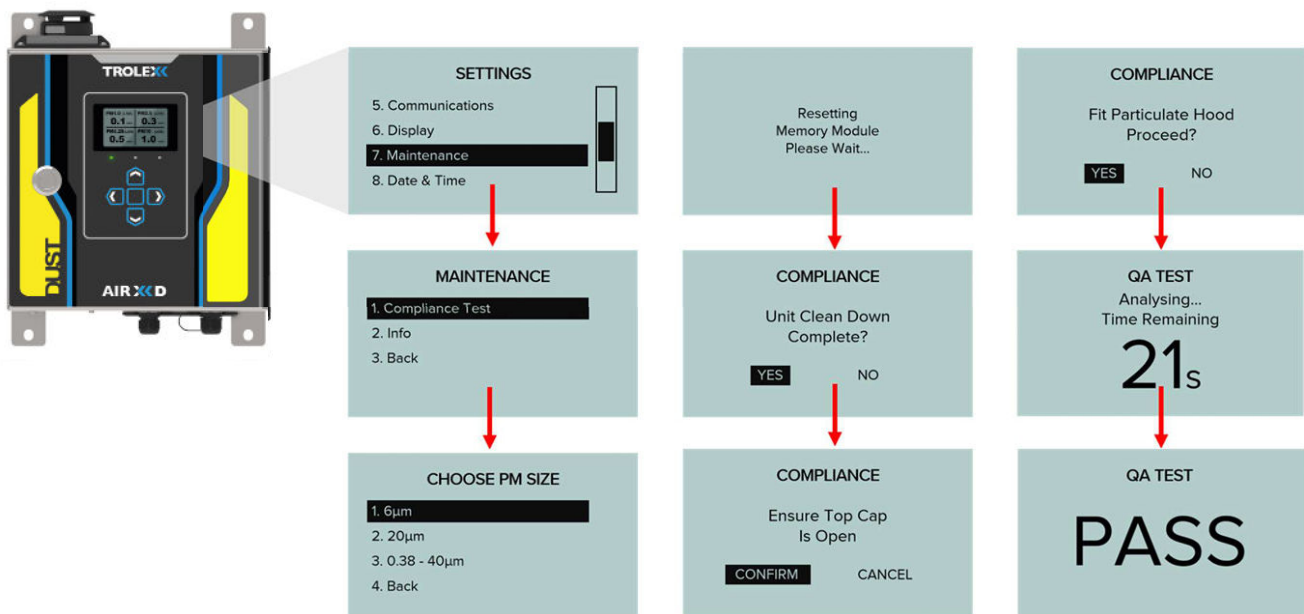


1. Navigate to the 'Settings' > 'Maintenance' > 'Compliance Test' on the **AIR XD** device
2. Follow the on-device instructions and select the reference material size required from the 'Choose PM Size' menu
3. The **AIR XD** will reset the memory module in preparation to perform the test. An on-device message will be displayed 'Resetting Memory Module - Please Wait..'
4. Following the reset, the **AIR XD** will prompt a clean down. It is important to ensure that the **AIR XD** particulate inlet has been cleaned following the steps outlined in **section 14.5** before selecting 'Yes' and proceeding with the test
5. Ensure that the **AIR XD** top cap is open and select 'Yes' to proceed

6. Once it is confirmed that the top cap is open, the **AIR XD** will prompt the fitting of the particulate dispersion hood that is supplied with the Trolex Compliance Audit Kit. It is important to ensure that the particulate dispersion hood is fitted to the **AIR XD** as shown below and that the dosing opening is accessible.




7. Before selecting “Yes” to continue, ensure that the particulate dosing bottle is filled with the required reference material and ready to be presented to the **AIR XD**.

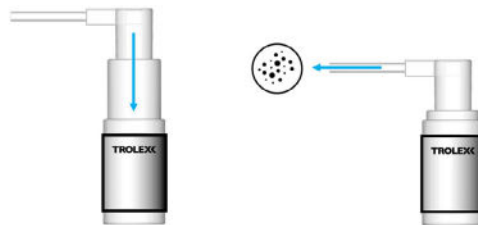

8. After selecting 'Yes' from the 'Fit Particulate Hood' screen, use the particulate dosing bottle containing the required size reference material to dose the particulate dispersion hood for the first 10 seconds of the compliance audit check.

**Note:** It is important to dose the **AIR XD** unit with several measures of the reference particulate material during the first 10 seconds of the compliance audit check.

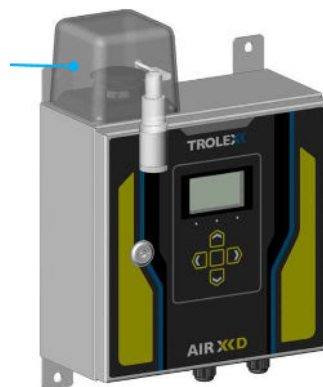

9. The **AIR XD** will continue to count down and analyse the sample particulate dose for the remain test time frame.
10. On sampling completion, the **AIR XD** will return an on-screen 'Pass' or 'Fail' result based on the test results and sampled reference particulate. Please see **section 14.7** for detailed test information.

- On return of a test result, and completion of the compliance audit test, the **AIR XD** will restart the memory module and revert to sampling function/data logging mode.

**Note:** Users may be required to clean the particle dispersion hood between compliance audit tests.

## 14.8 Compliance audit check: The results

The **AIR XD** is designed to return an on-device 'Pass'/'Fail' result based on the compliance audit check results and operational threshold for the applicable particulate sizes.

### Return of a 'Pass' result

On return of a 'Pass' result, the particulate sensor is functioning as expected and normal monitoring operations can resume.


### Return of a 'Fail' result

Run a sensor cleaning operation as highlighted in **section 14.5**.

- Repeat the compliance audit check sequence and note the test result.
- On return of a 'Pass' result, the particulate sensor is functioning as expected and normal monitoring operations can resume.
- On return of a repeat "Fail" result, please contact Trolex to discuss support or servicing options of the **AIR XD** unit.

### Device logged test data

As the **AIR XD** test procedure is completed for each particle size, the unit automatically exports specific 'TRX' files for the logged test period only. These are saved with a specific file name prefix ('QA') to identify them from normal operational data logging file sets, which can be imported into Trolex **Breathe** software and analysed as required.

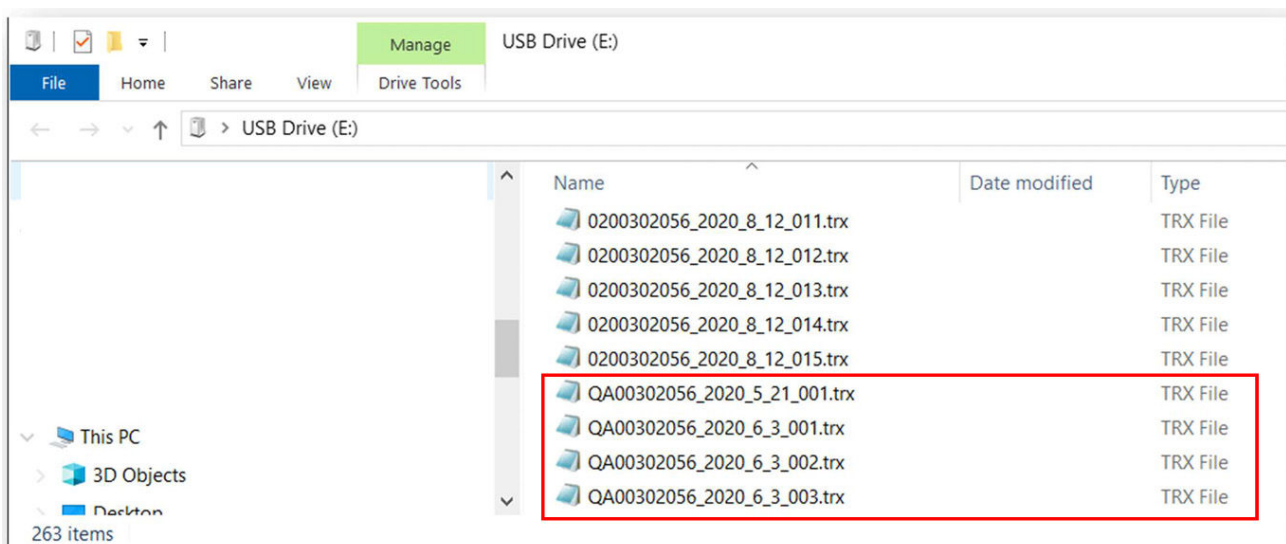

## 15. TROUBLESHOOTING

The following sections detail and contain information to assist with the troubleshooting of instrument functionality if required. If an issue is non-resolvable based on the information below, please contact the Trolex product support team.

### 15.1 High temperature operating

The **AIR XD** operates a protective thermal cut-out sequence when the temperature inside the instrument exceeds the maximum operating temperature specification detailed in **section 7**. This protective measure is in place to maintain the lifespan and operating functionality of the optical sensor assembly when the **AIR XD** is installed in environments with high ambient temperatures.

### 15.2 Low temperature start-up

If the internal temperature of the instrument is suspected to be below -10 °C, for example, if it has been left powered off for a period of time in a very cold environment, damage to the optical assembly may occur when power is applied. Allow the instrument to reach safe operating temperature before applying power.

### 15.3 Fault codes

The following codes relate to on-screen warnings that the **AIR XD** will display when a fault is encountered during normal operations.

Code	Fault name	Fault description	Fault check
0x0009	Failed to load settings	Failed to load and apply user-configured settings  <b>AIR XD</b> default settings will be applied	Re-apply custom settings and check if unit saves and restores files  Contact Trolex or an approved distributor if this fails
0x0301	No sensor comms	Communications with the particulate sensor assembly has been lost	Check 'D' type connector to sensor housing and power cycle unit
0x0304	Fan current too high	Fan may have malfunctioned	Check instrumentation is operating within rated temperature range
0x0305	No fan current	Fan may have malfunctioned	Check instrumentation is operating within rated temperature range

Code	Fault name	Fault description	Fault check
0x0306	Sensor laser current high	Particulate sensor may have failed or is operating at excessive temperatures	Check instrumentation is operating within rated temperature range
0x0307	Sensor laser current low	Particulate sensor may have failed	Contact Trolex or an approved Distributor.
0x0308	Sensor temperature too high	Instrument is operating above specified temperature limits  Instrument has gone into safe mode	Reduce operating temperature below +50 °C
0x0402	Lost memory comms	Communications to memory module has failed  Data logging functionality is lost	Power cycle to reset instrument processor and retry  Contact Trolex or approved Distributor if this fails

## 16. GLOSSARY AND DEFINITIONS

Flow rate	The volume of air mixture which passes per unit time
IP	Ingress protection
TSP	Total suspended particulate matter in the air measuring up to 40 micrometres for standard TSP range and up to 150 micrometres for extended TSP range.
$\mu\text{g}/\text{m}^3$	Microgram per metre cubed. The concentration of an air pollutant given in micrograms (one-millionth of a gram) per cubic metre of air.
$\text{mg}/\text{m}^3$	Milligram per metre cubed
OPC	Optical Particulate Counter
PPM	Parts per million
Particulate matter (PM)	General term for a mixture of solids and liquid droplets suspended in the air from typical processes including combustion, industrial activities or natural sources
$\text{PM}_x$	$\text{PM}_x$ is particulate matter x micrometer or less

## 17. DISPOSAL

### 17.1 Waste of Electrical and Electronic Equipment (WEEE) Directive (2012/19/EU)

The **AIR XD** operates a protective thermal cut-out sequence when the temperature inside the instrument exceeds the maximum operating temperature specification, detailed in **section 7**. This protective measure is in place to maintain the lifespan and operating functionality of the optical sensor assembly when the **AIR XD** is installed in environments with high ambient temperatures.



This symbol, if marked on the product or its packaging, indicates that this product must not be disposed of with general household waste.

In the European Union and many other countries, separate collection systems have been set up to handle the recycling of electrical and electronic waste.

At the end of the product's life, do not dispose of any electronic sensor, component or instrument in the domestic waste. Contact Trolex or the distributor for disposal instructions.



---

## DISCLAIMER

The information provided in this document contains general descriptions and technical characteristics of the performance of the product. It is not intended as a substitute for and is not to be used for determining suitability or reliability of this product for specific user applications. It is the duty of any user or installer to perform the appropriate and complete risk assessment, evaluation and testing of the products with respect to the specific application or use. Trolex shall not be responsible or liable for misuse of the information contained herein. When instruments are used for applications with technical safety requirements, the relevant instructions must be followed.

All pertinent state, regional, and local safety regulations must be observed when installing and using this instrument. For reasons of safety and to help ensure compliance with documented system data, only Trolex or its affiliates should perform repairs to components.

Trolex Ltd. reserves the right to revise and update this documentation from time to time without obligation to provide notification of such revision or change. Revised documentation may be obtainable from Trolex.

Trolex Ltd. reserves the right, without notice, to make changes in equipment design or performance as progress in engineering, manufacturing or technology may warrant.

## TRADEMARK

© 2025 Trolex® Ltd.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Trolex.

Trolex is a registered trademark of Trolex Ltd. The use of all trademarks in this document is acknowledged.

### **At Trolex, we save lives.**

We believe that no person should risk their life to earn a living.

Our aim is to become the world's leading name in health and safety technology, through pioneering products that provide real-world benefits to our customers, whenever workers operate in hazardous environments.

For more information about Trolex, please contact us at:

#### **Website**

[trolex.com](http://trolex.com)

#### **Enquiries**

[sales@trolex.com](mailto:sales@trolex.com)

#### **Telephone**

+44 (0) 161 483 1435

**@TrolexUK**



#### **Trolex Ltd**

Newby Road, Hazel Grove  
Stockport, Cheshire  
SK7 5DY, United Kingdom